

SCALARWORKS®

S H O O T E R D R I V E N ®


KICK/06

OWNER'S MANUAL



01.

Seat KICK mount in machined ring slot.

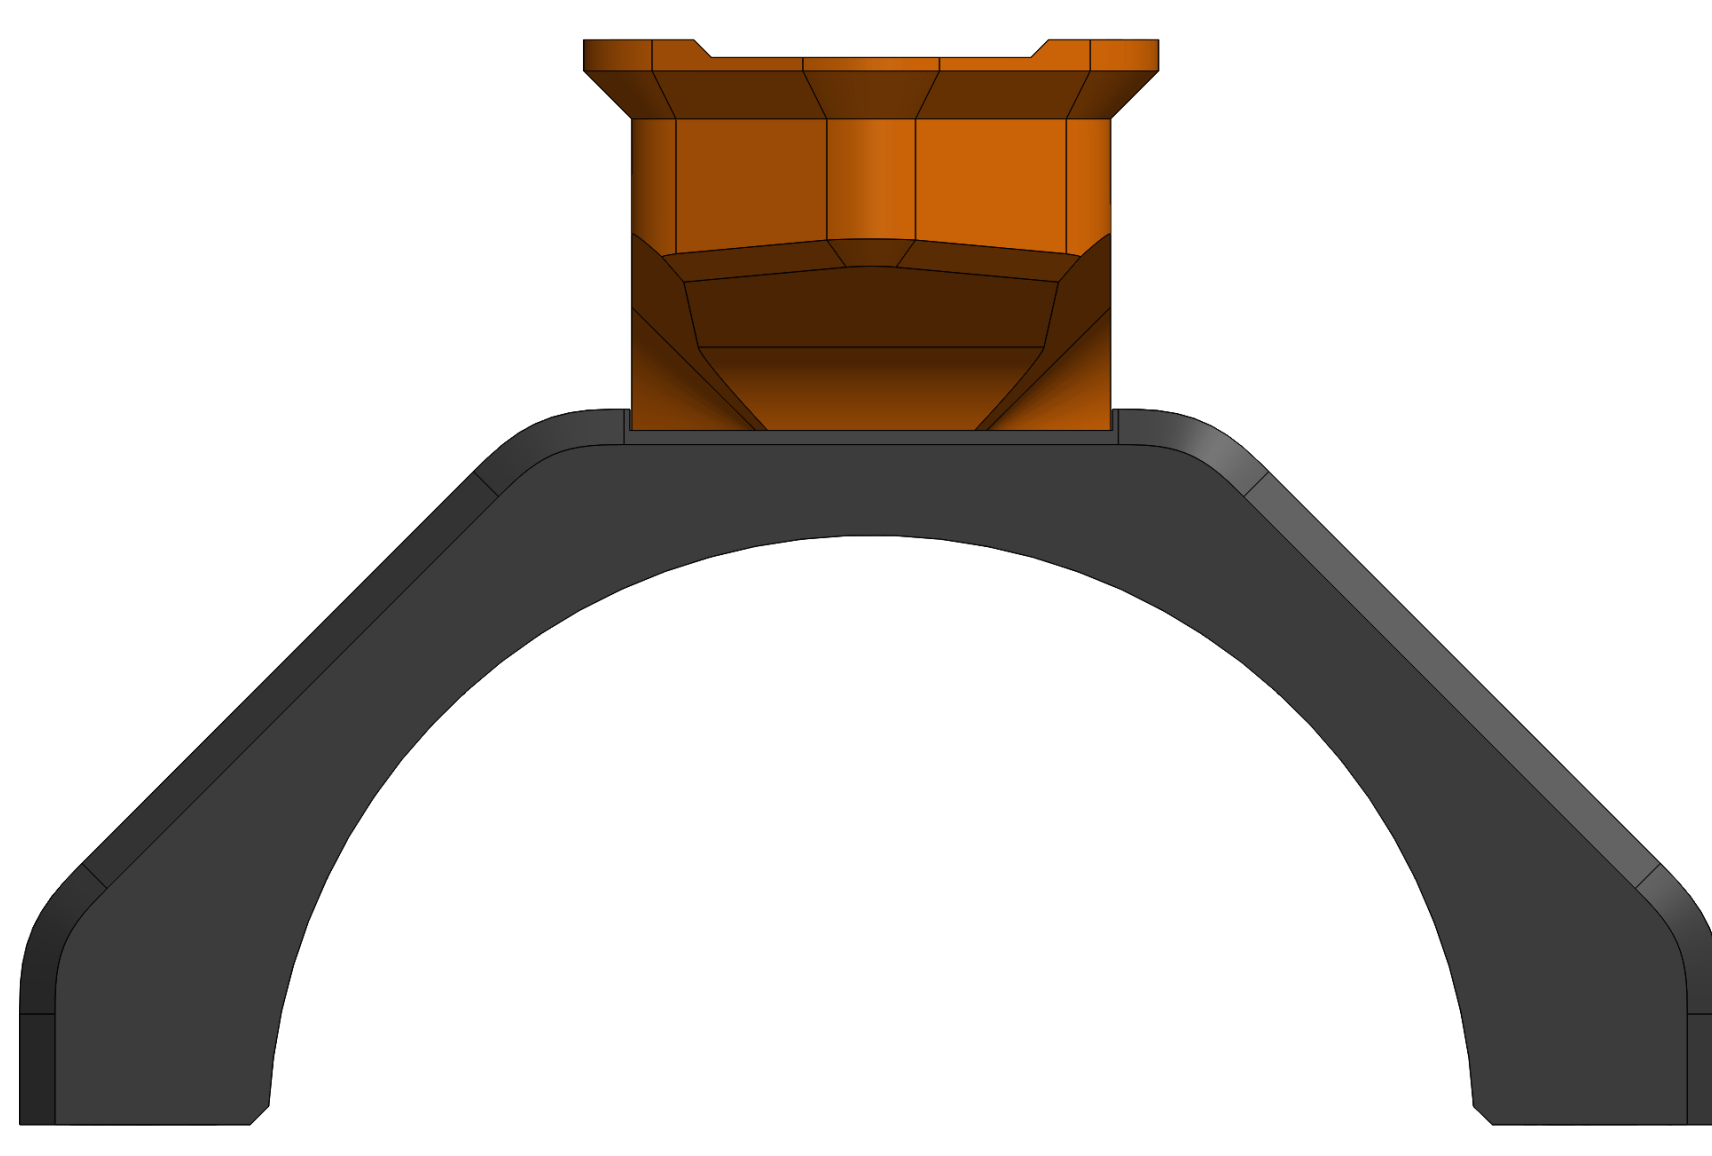



02.

Tighten each KICK mount screw, as many times as needed until torque stabilizes at 40inch-lbs.




03.

Visually inspect that KICK screws are not protruding into the ring opening.

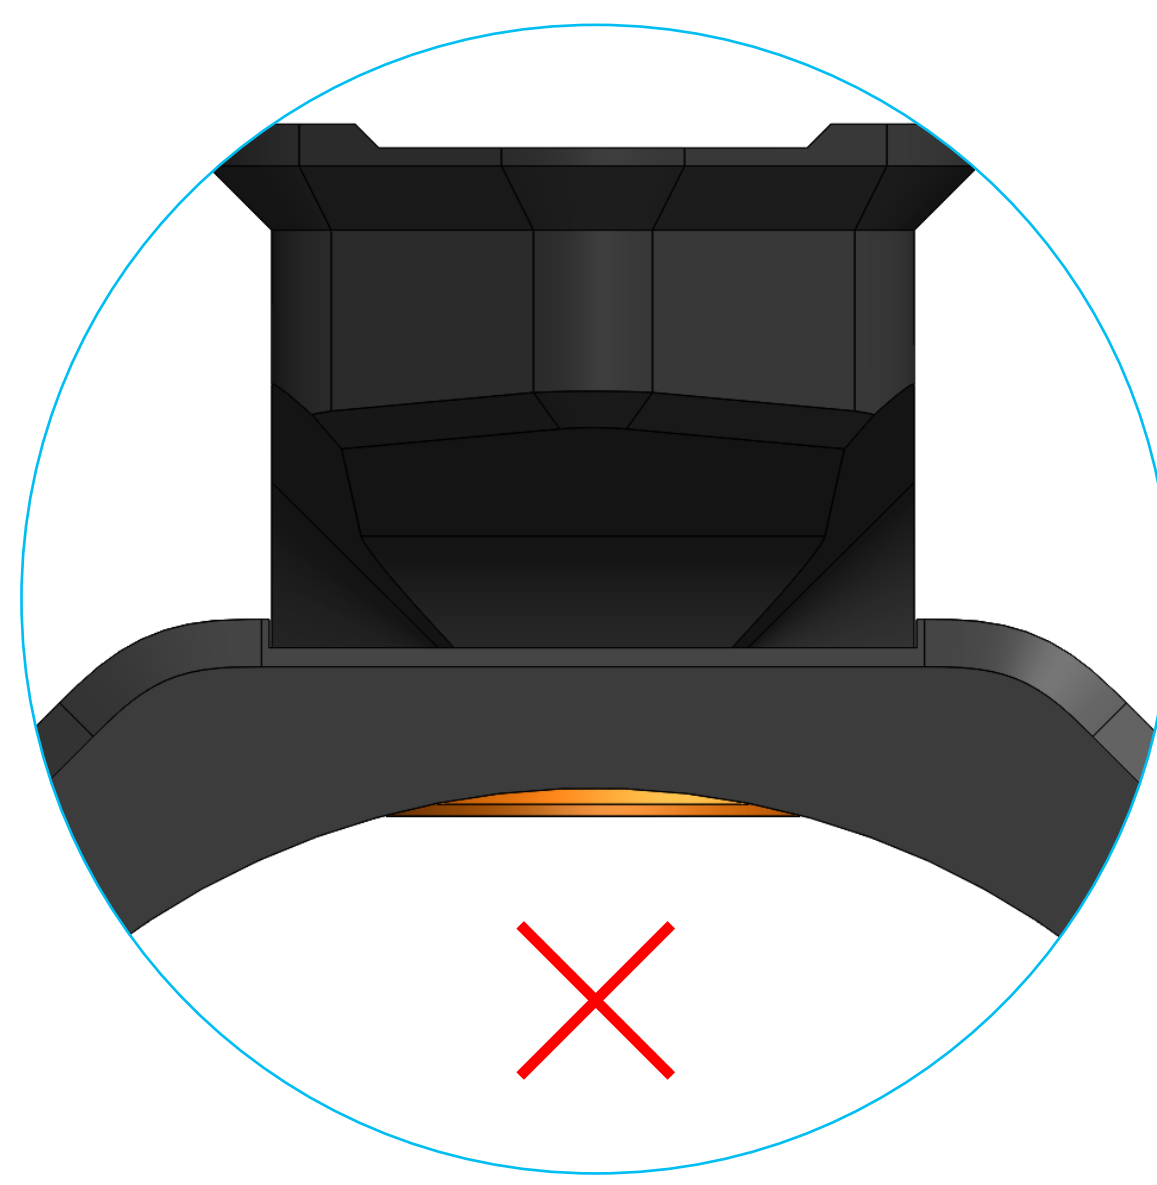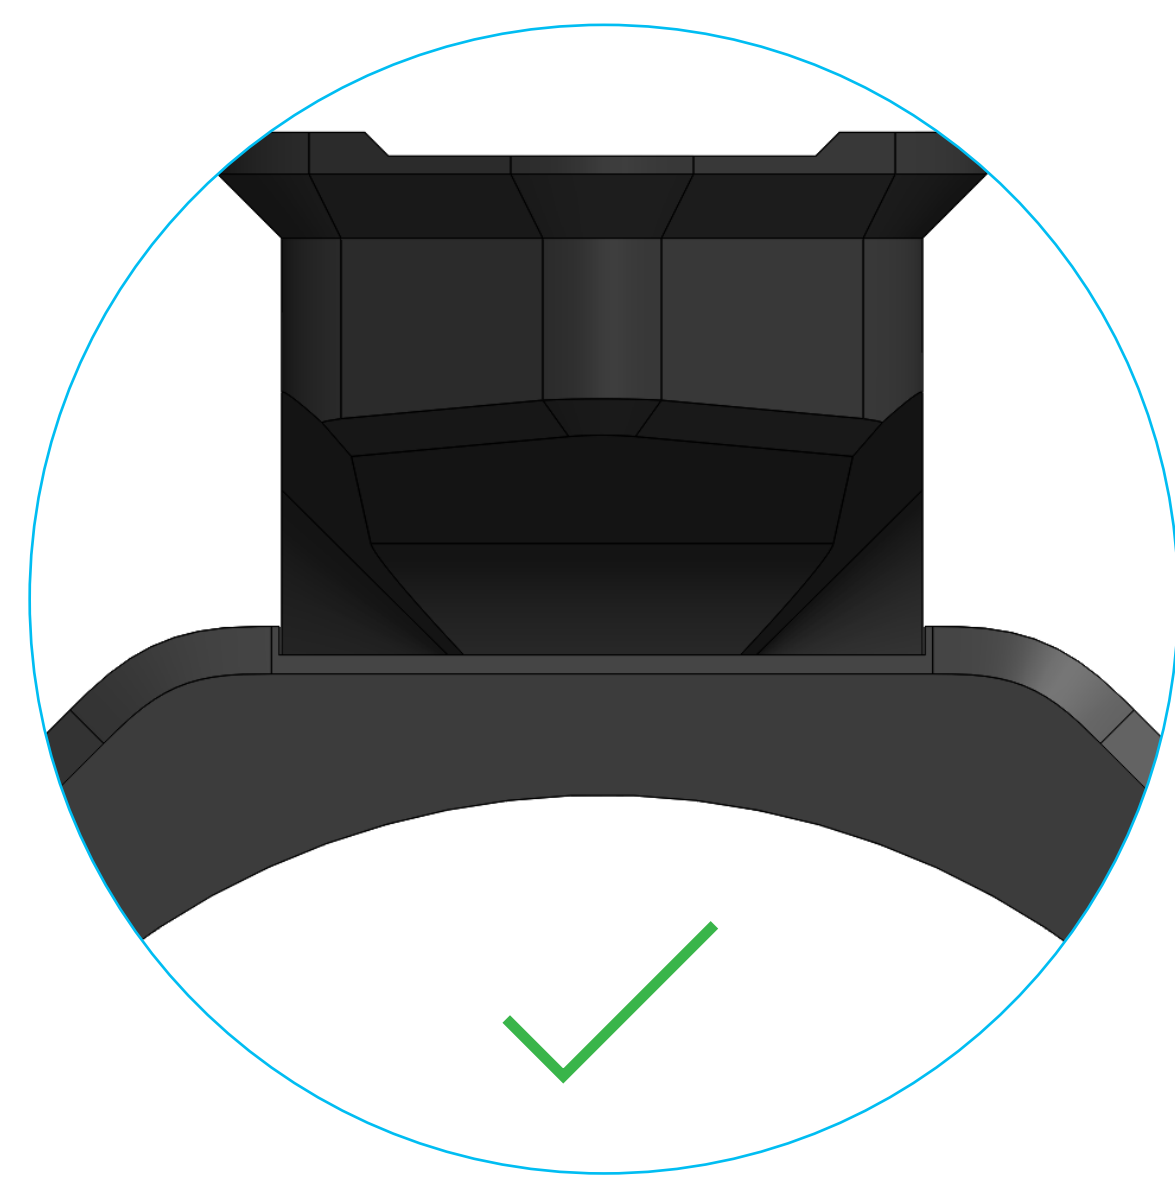

04.

Attach ACRO to mount using supplied screws. Tighten screws to 15inch-lbs.

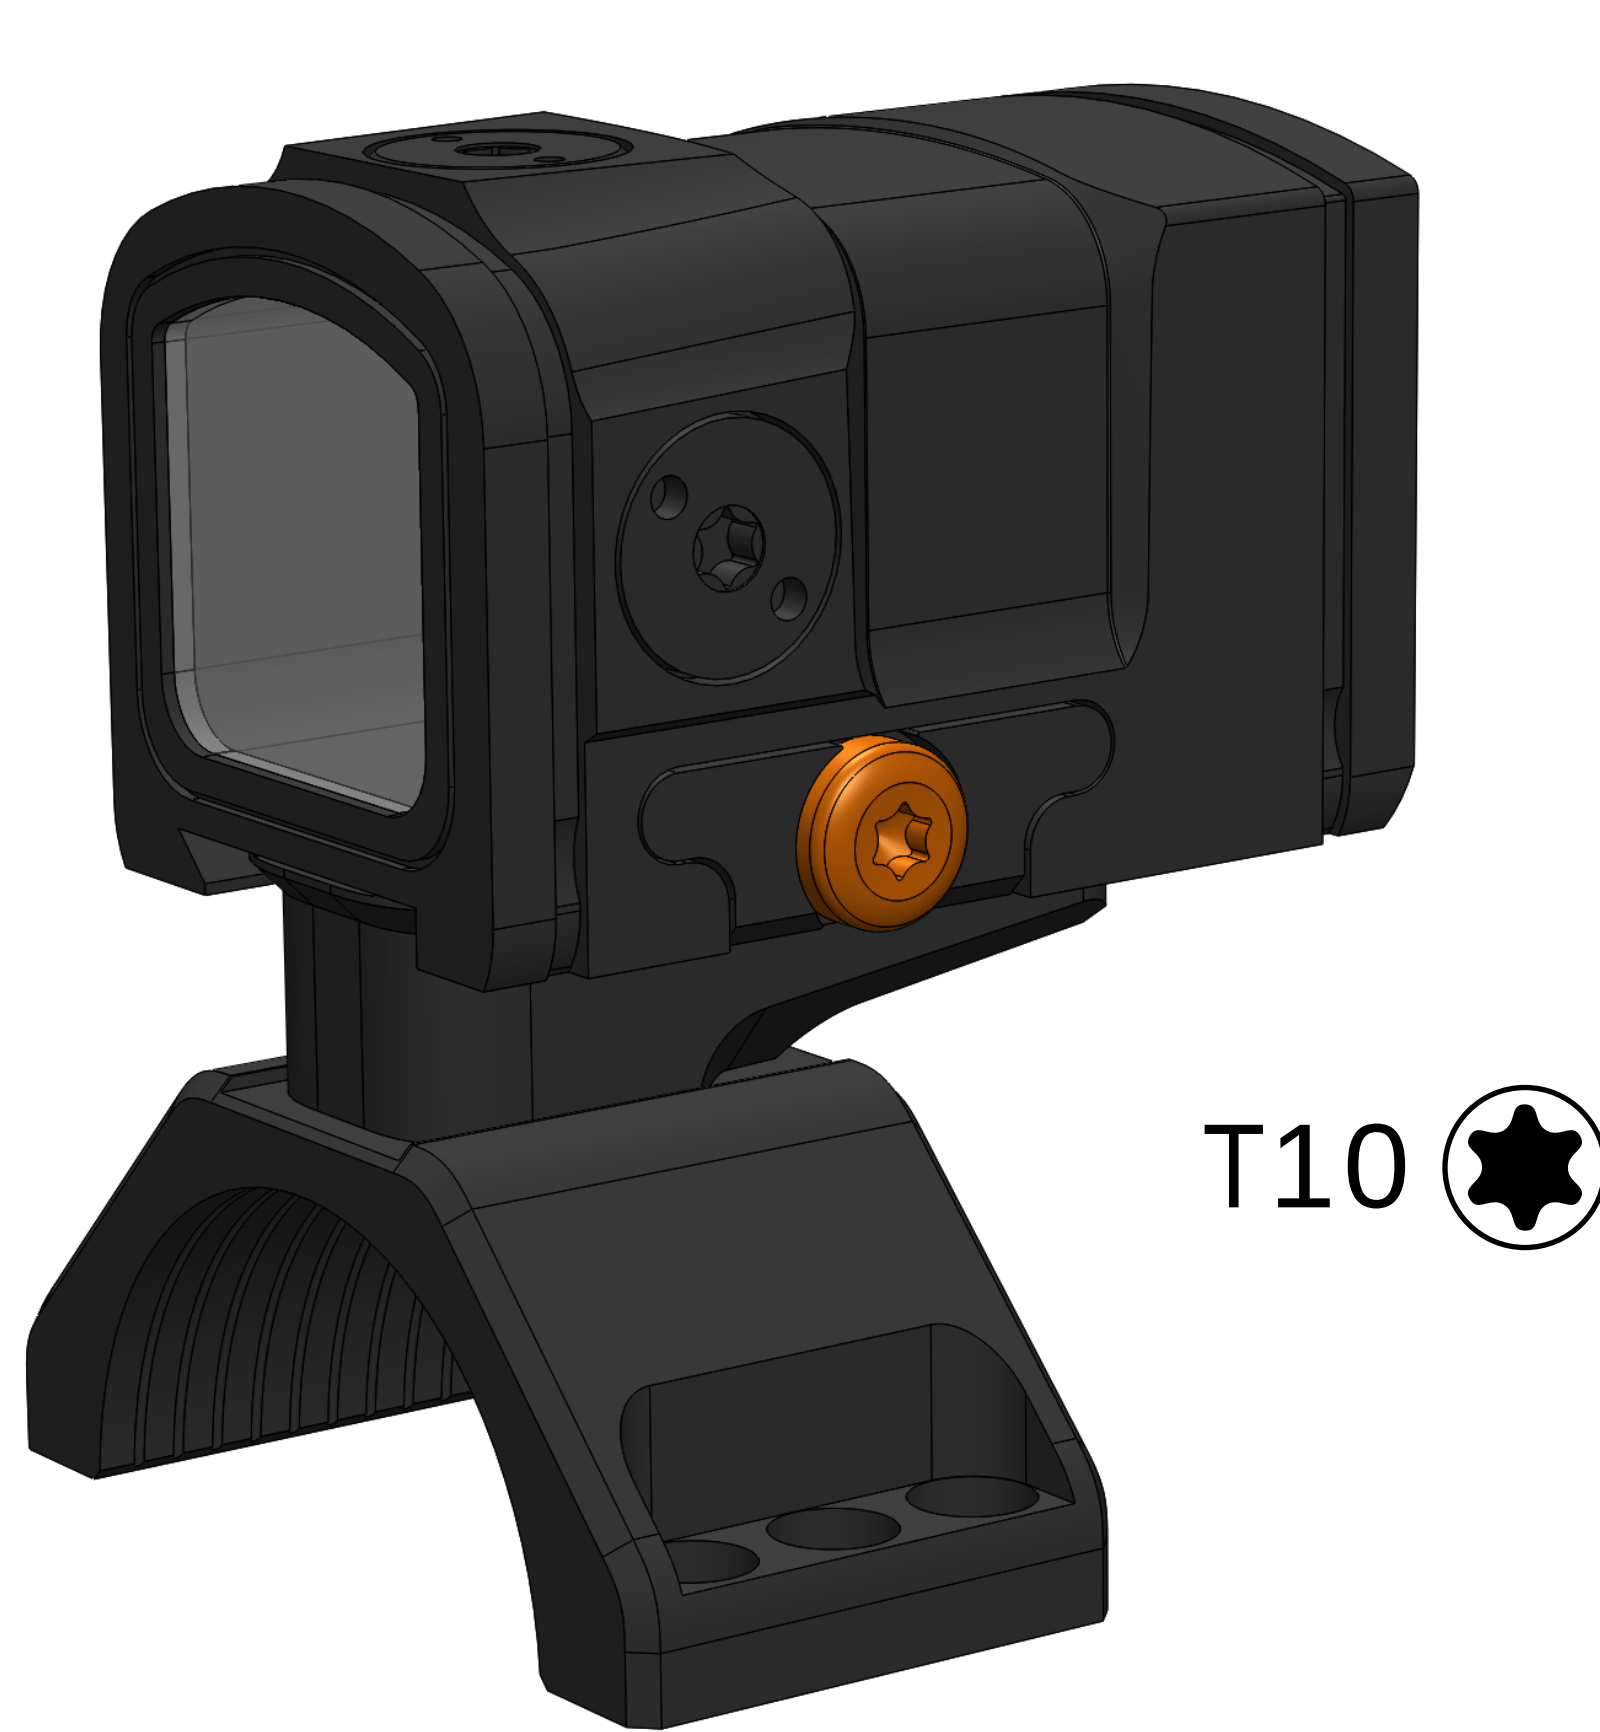

05.

Follow standard ring installation instructions for your FUSE scope mount.

[Owner's Manuals](#)

Questions?

[Email Support](#)