

SCALARWORKS®

S H O O T E R D R I V E N®


LEAP/08

Generation 3


OWNER'S MANUAL




- 01.** Install ***only*** the screws on the “NO GAP” side so that the scope can be rotated in the rings.

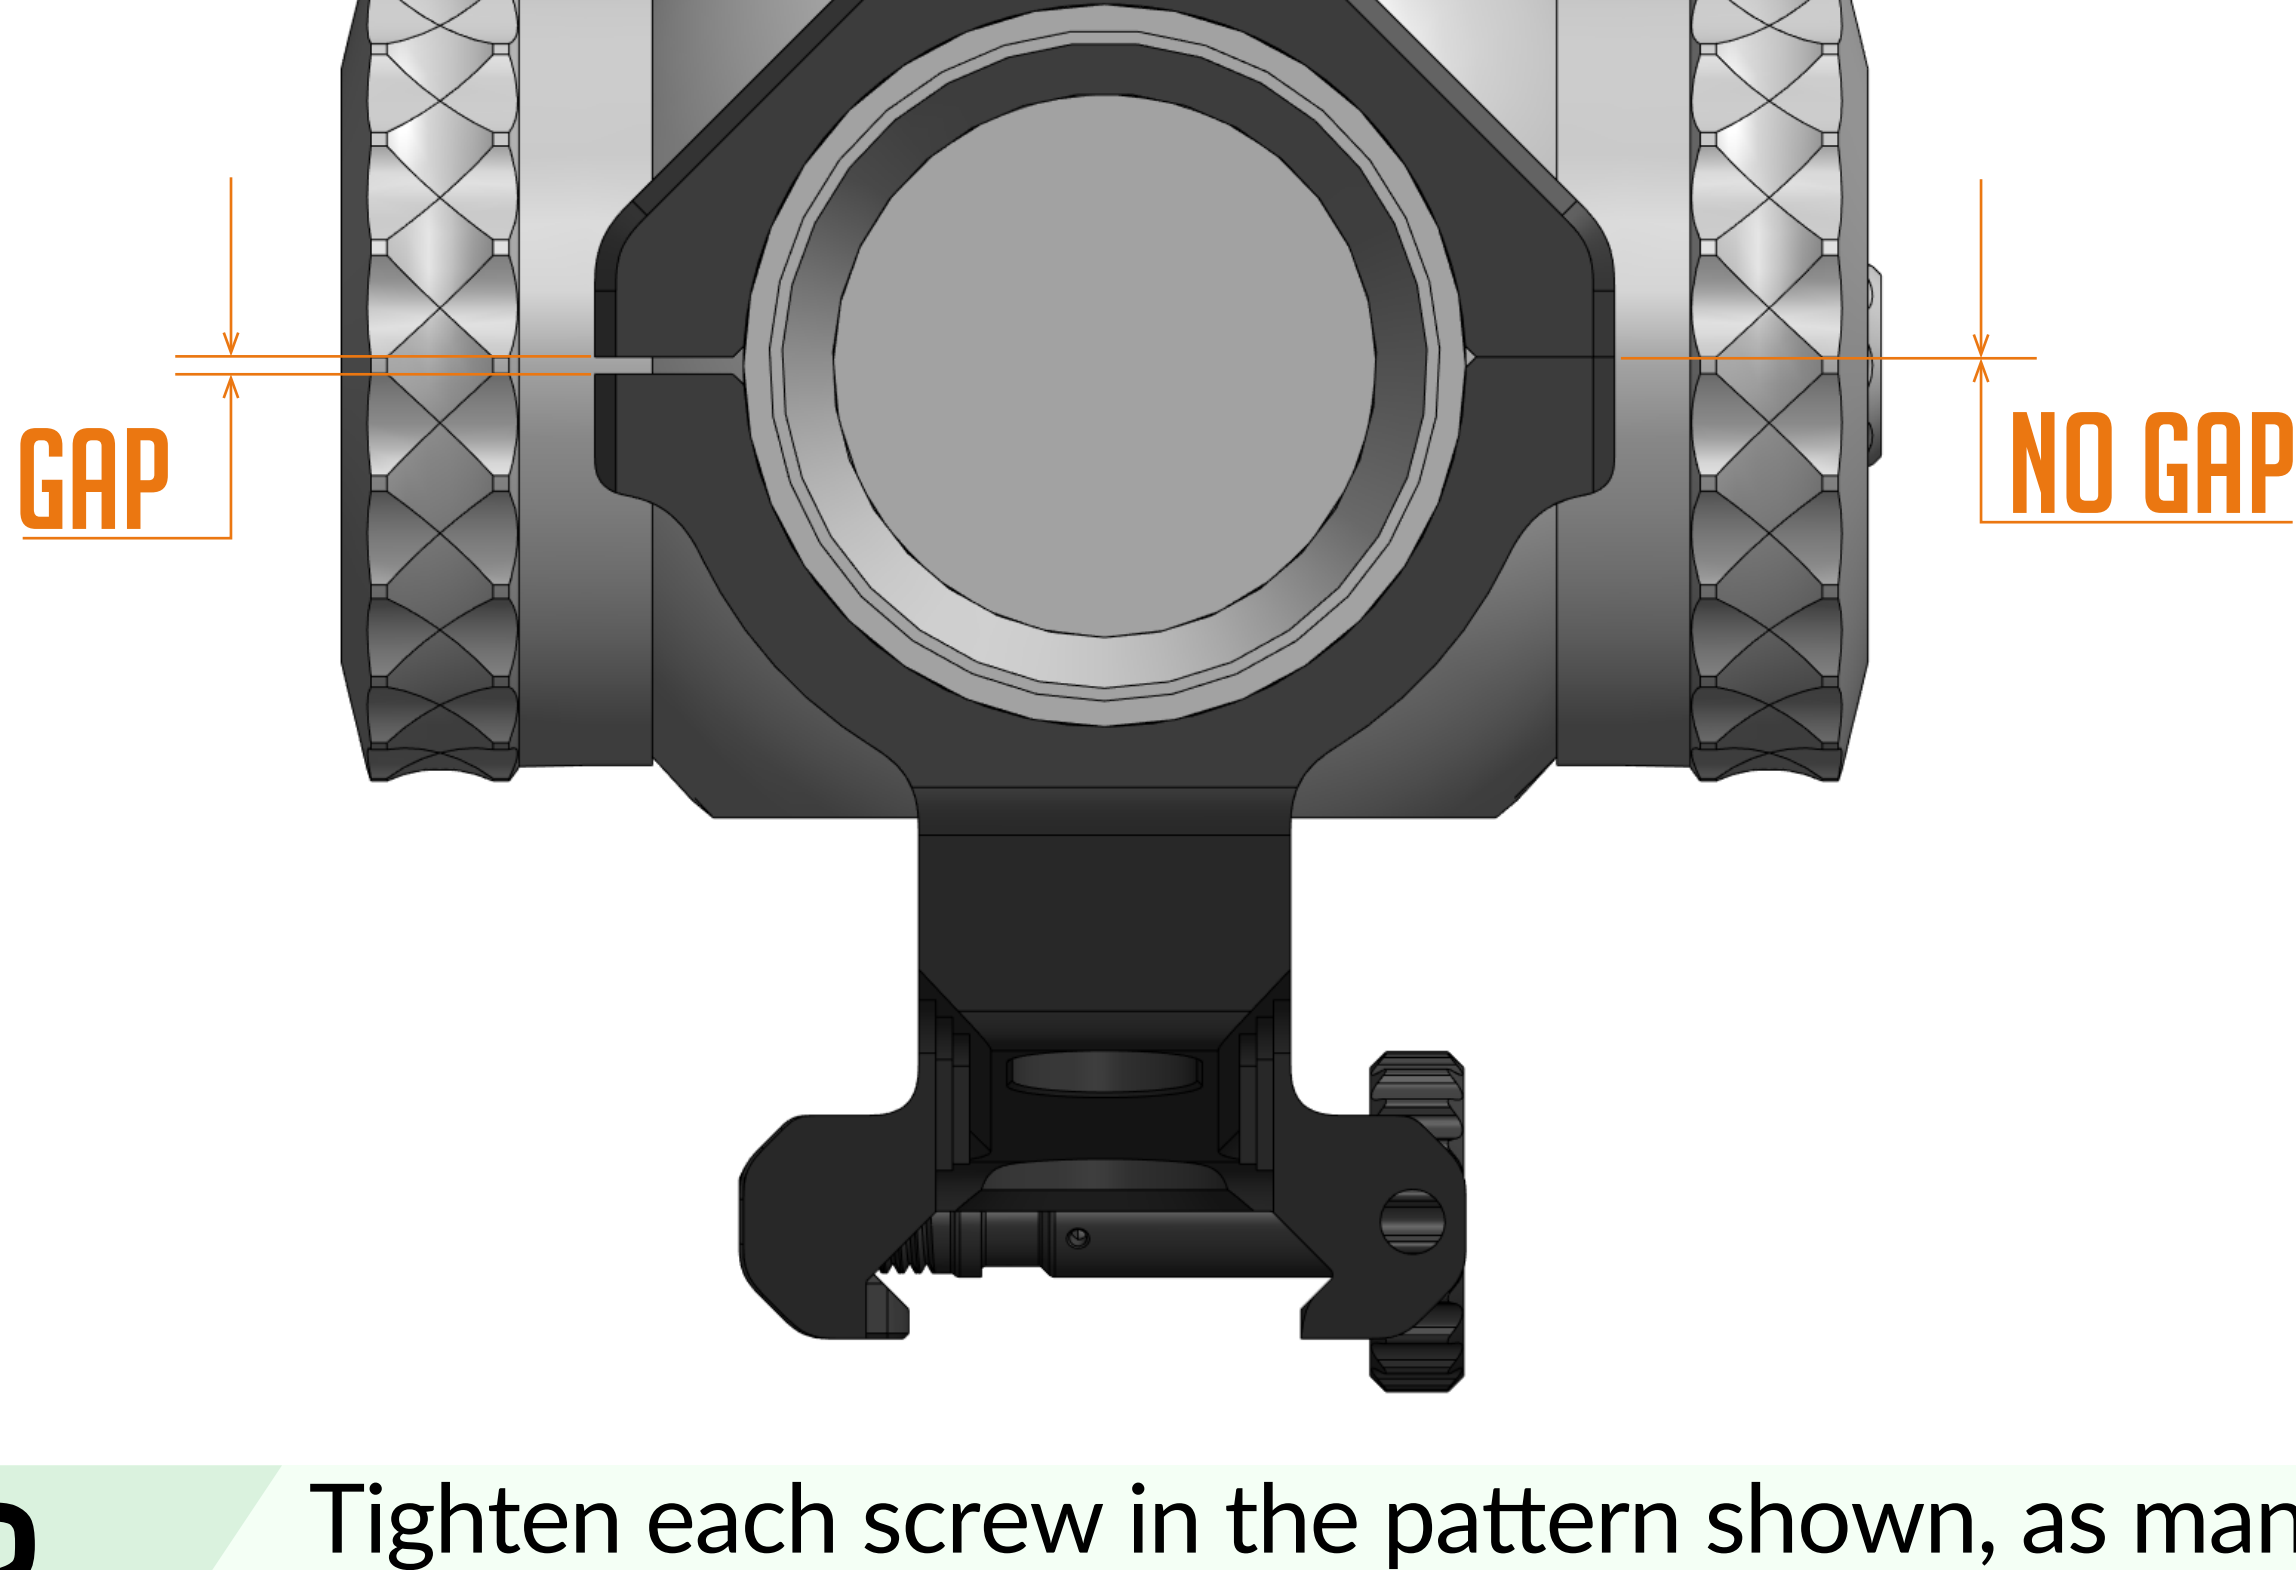


- 02.** Tighten each screw in the pattern shown, as many times as needed until torque stabilizes at 20inch-lbs.

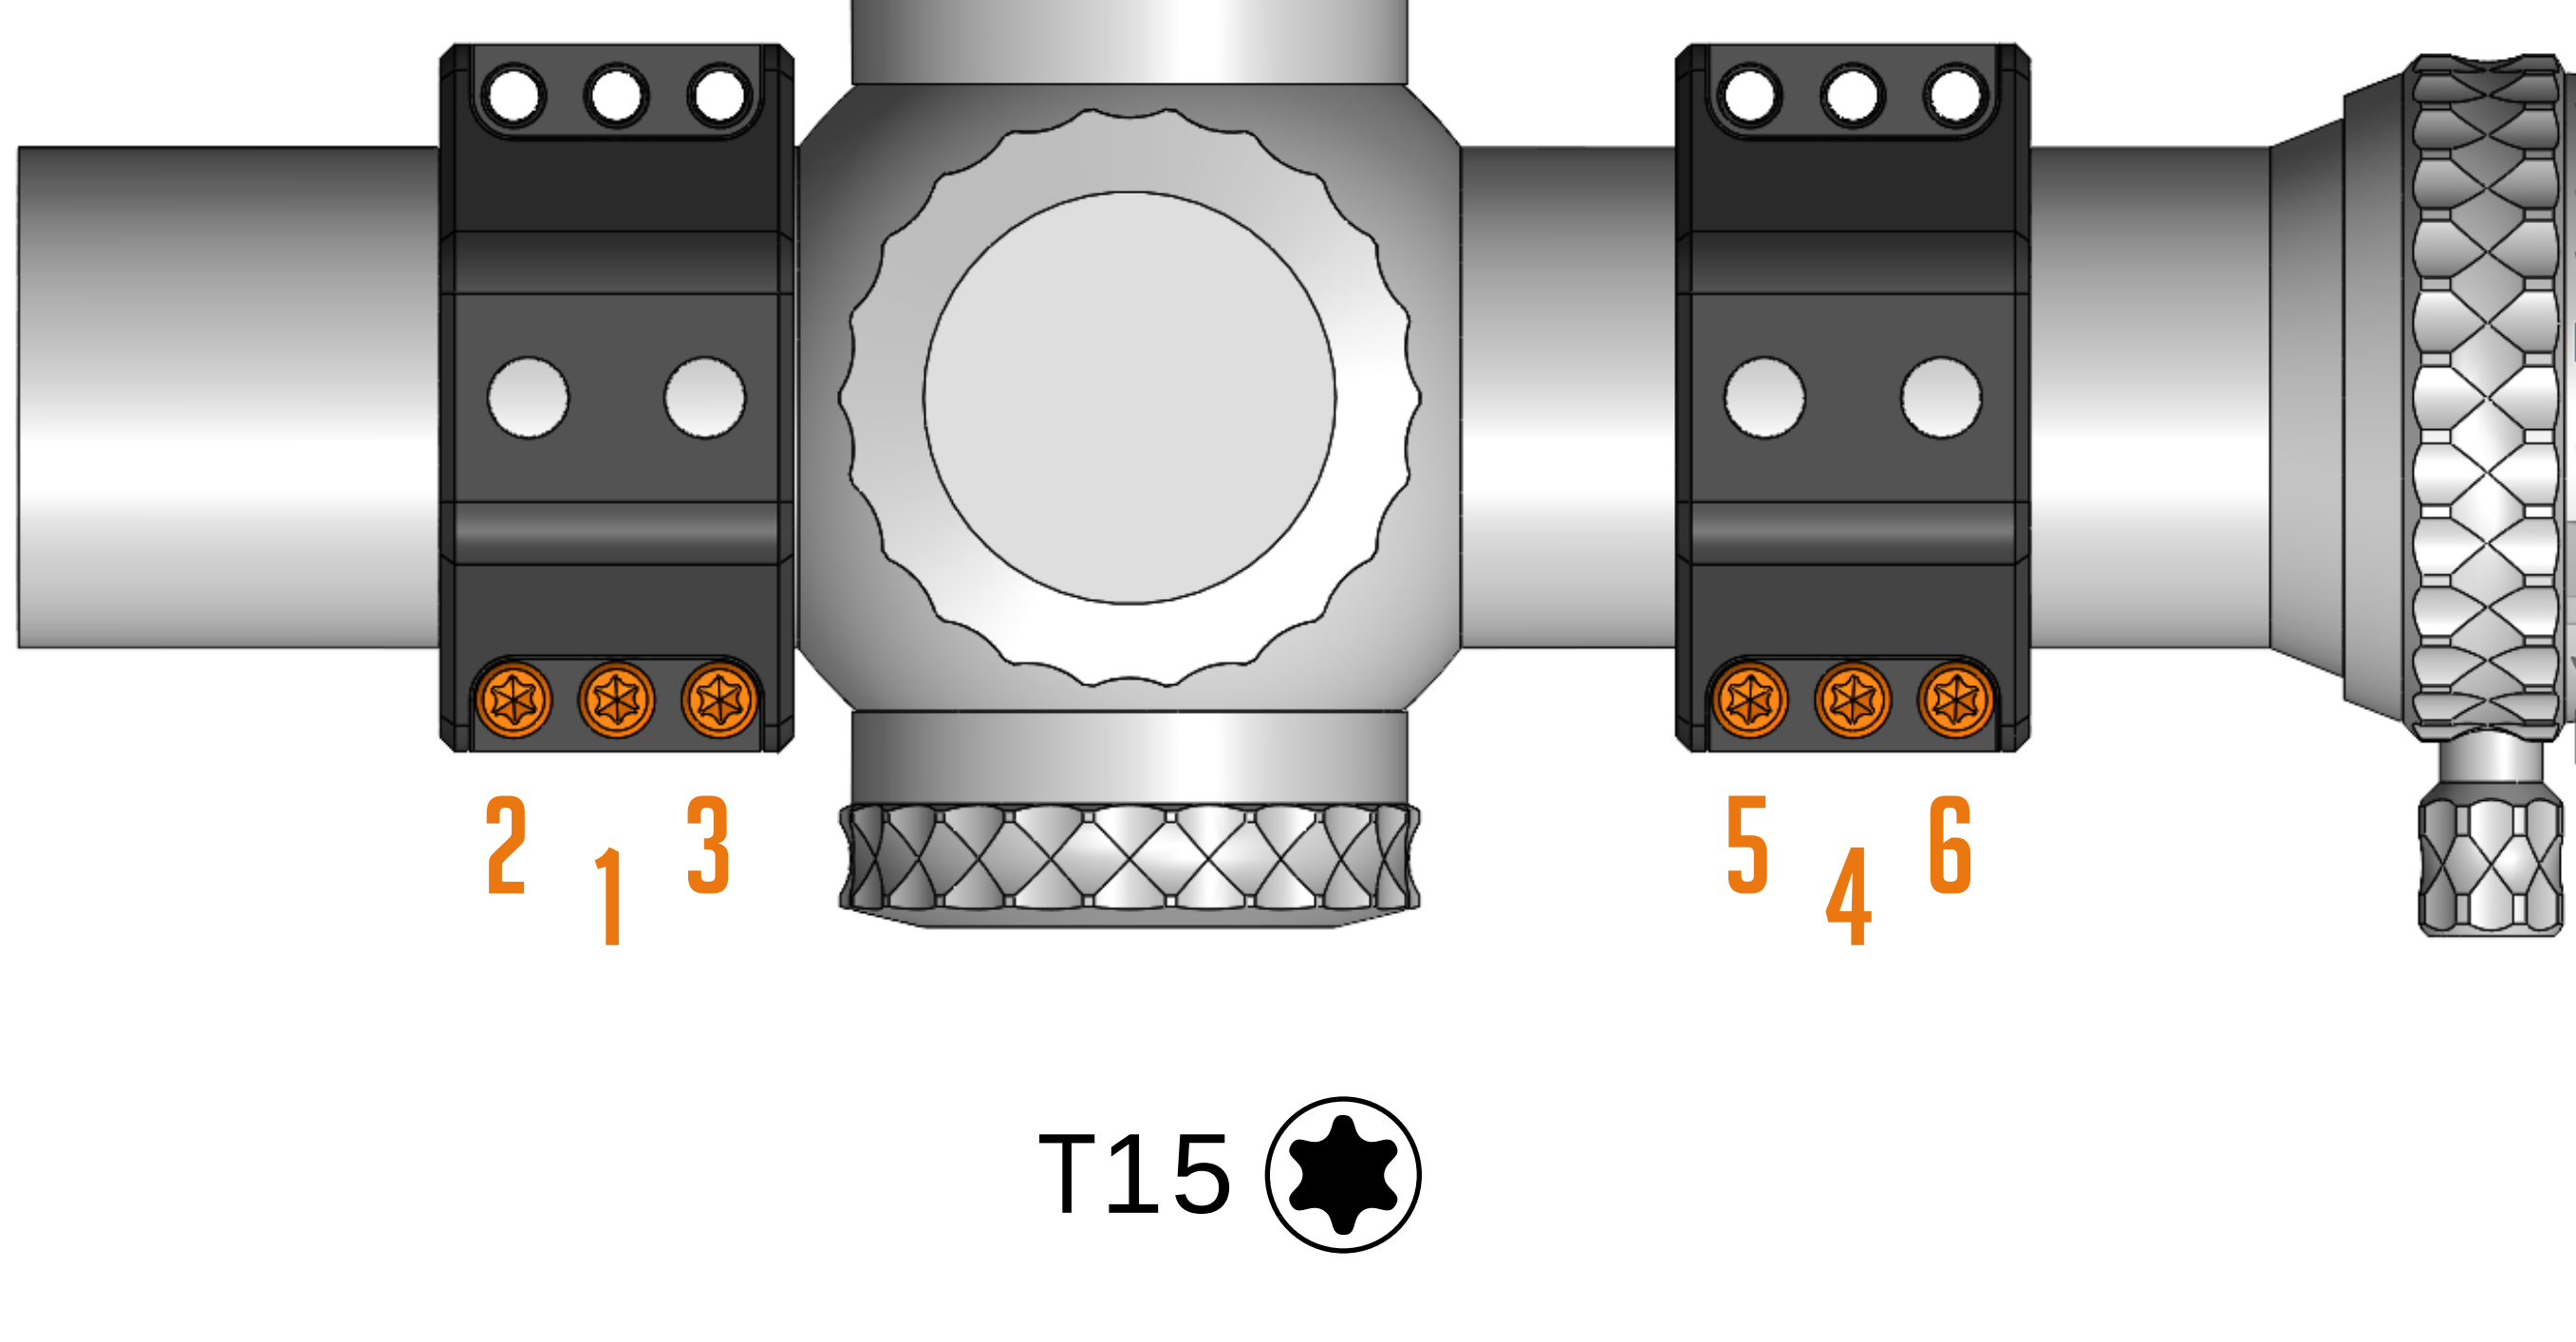


- 03.** Adjust scope while screwing in LevelDrive. Repeat until no gap is visible between LevelDrive & Scope.

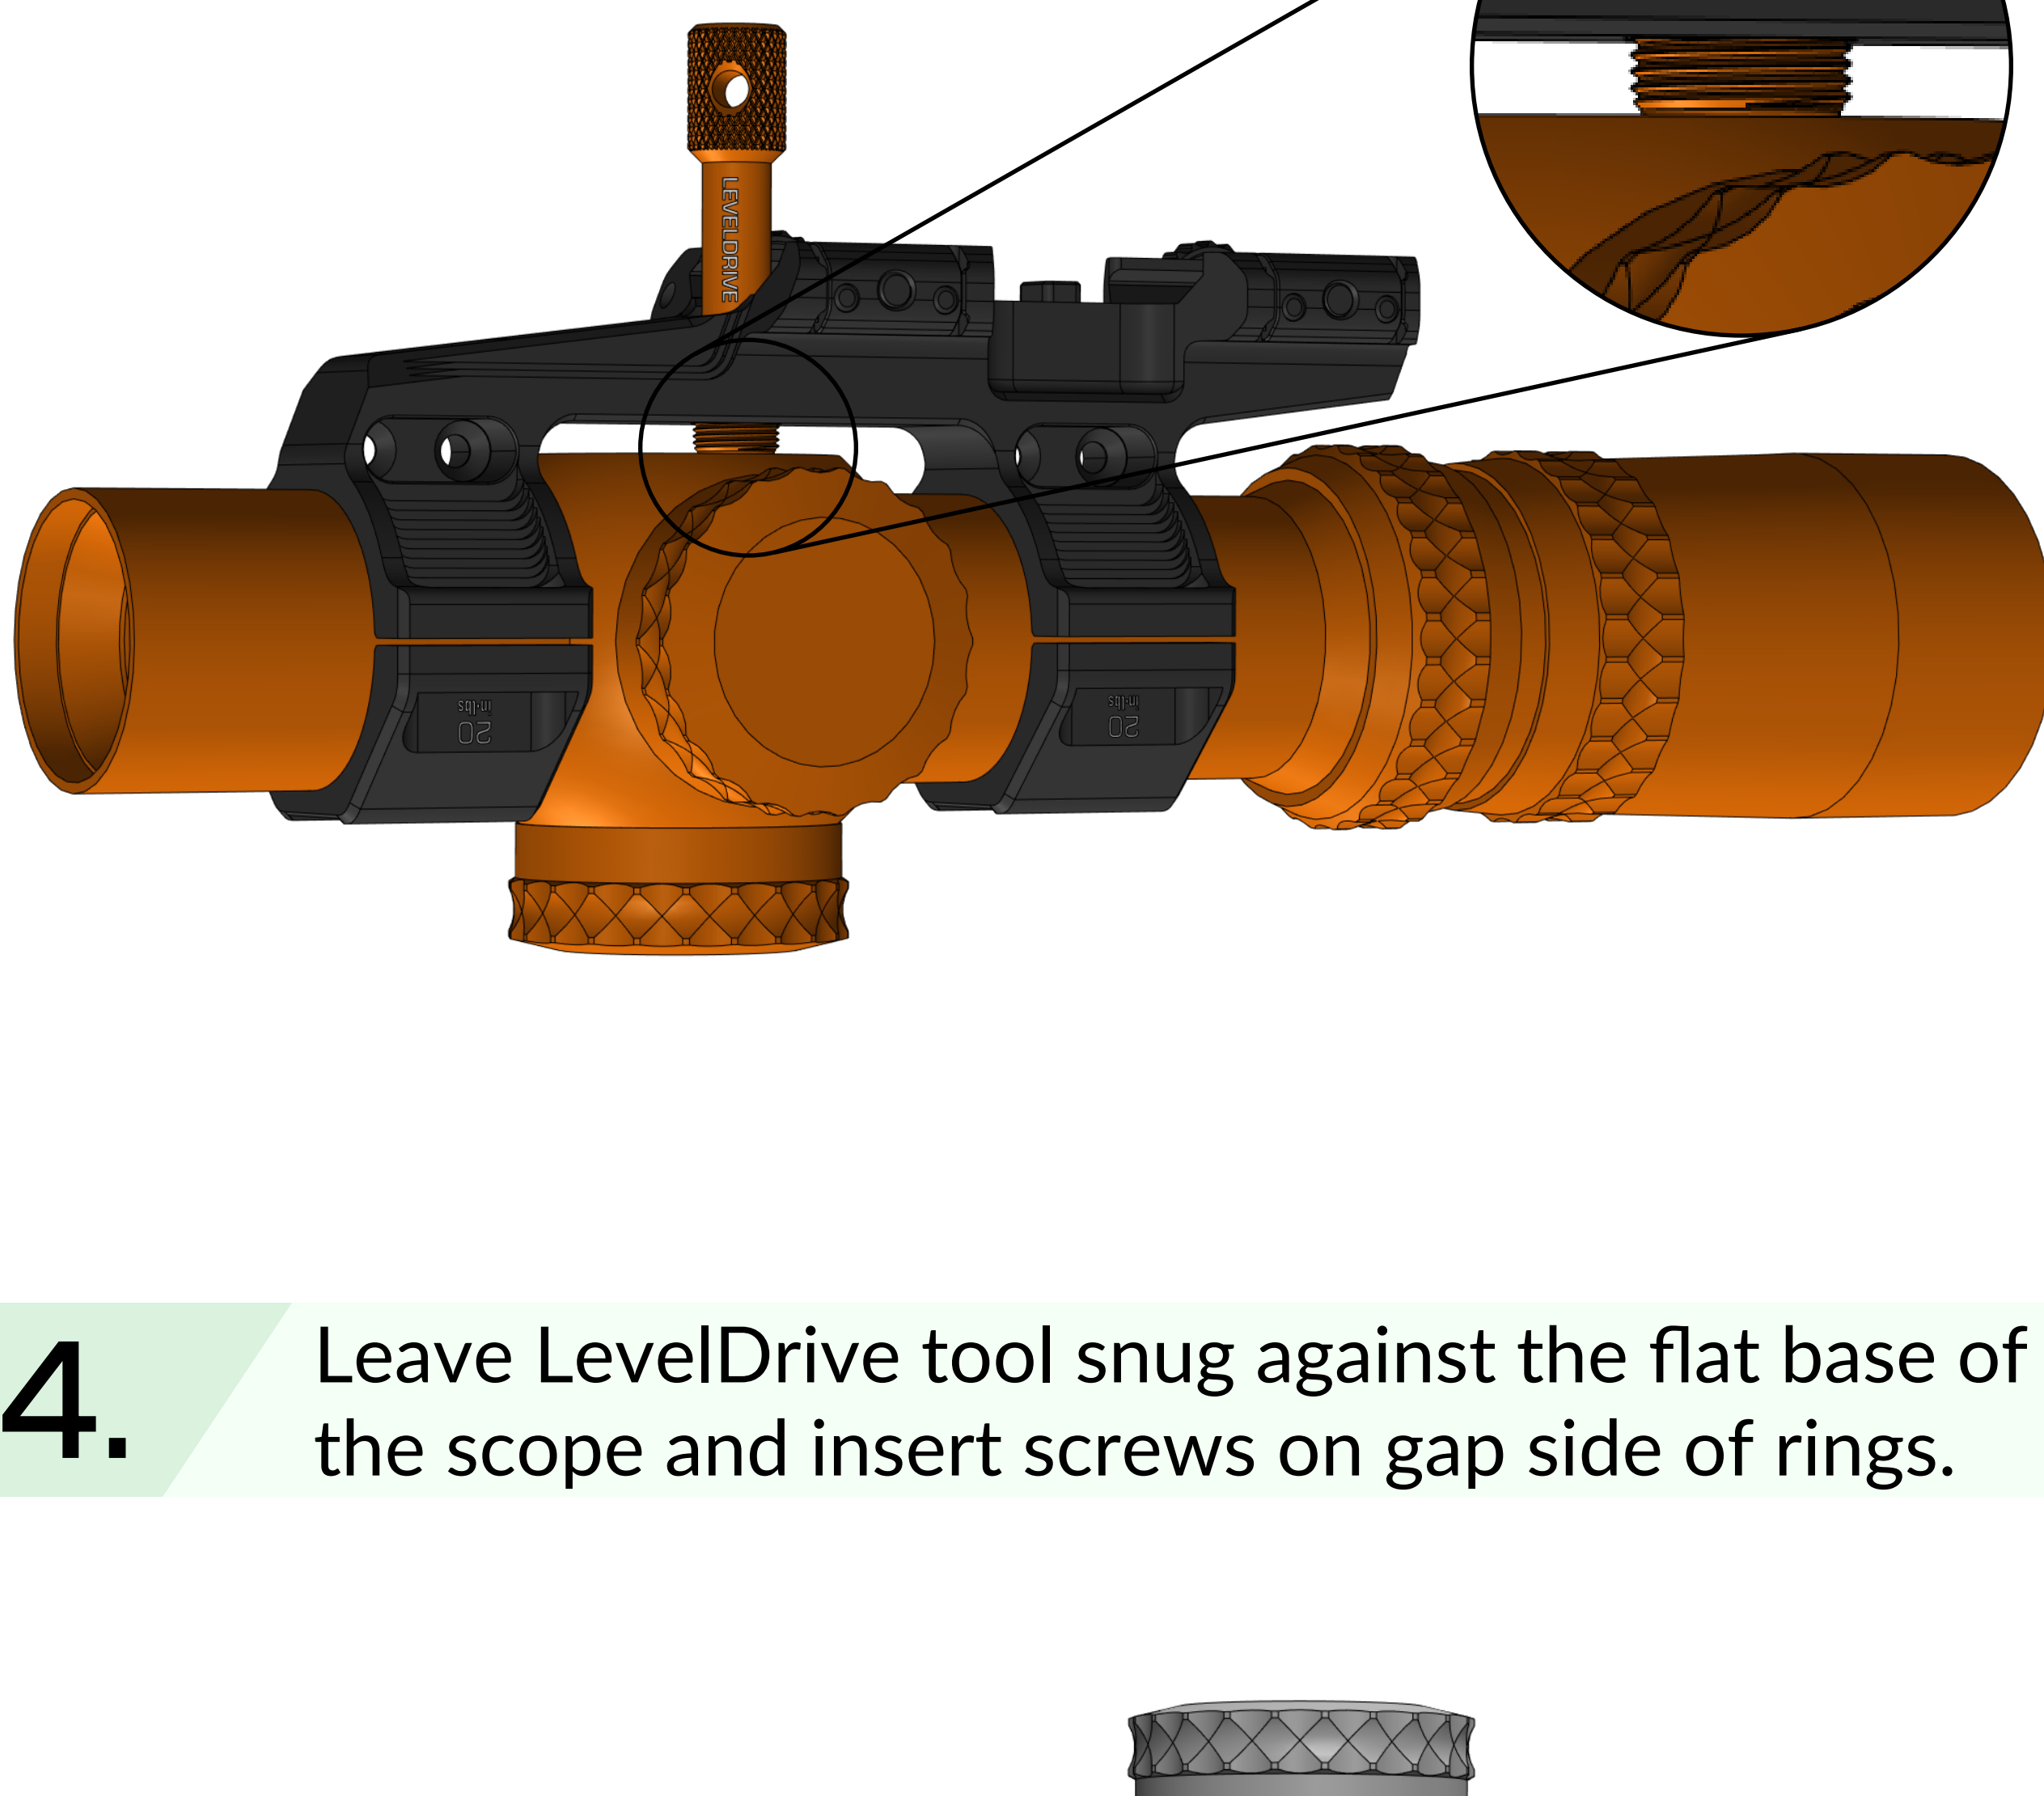


- 04.** Leave LevelDrive tool snug against the flat base of the scope and insert screws on gap side of rings.

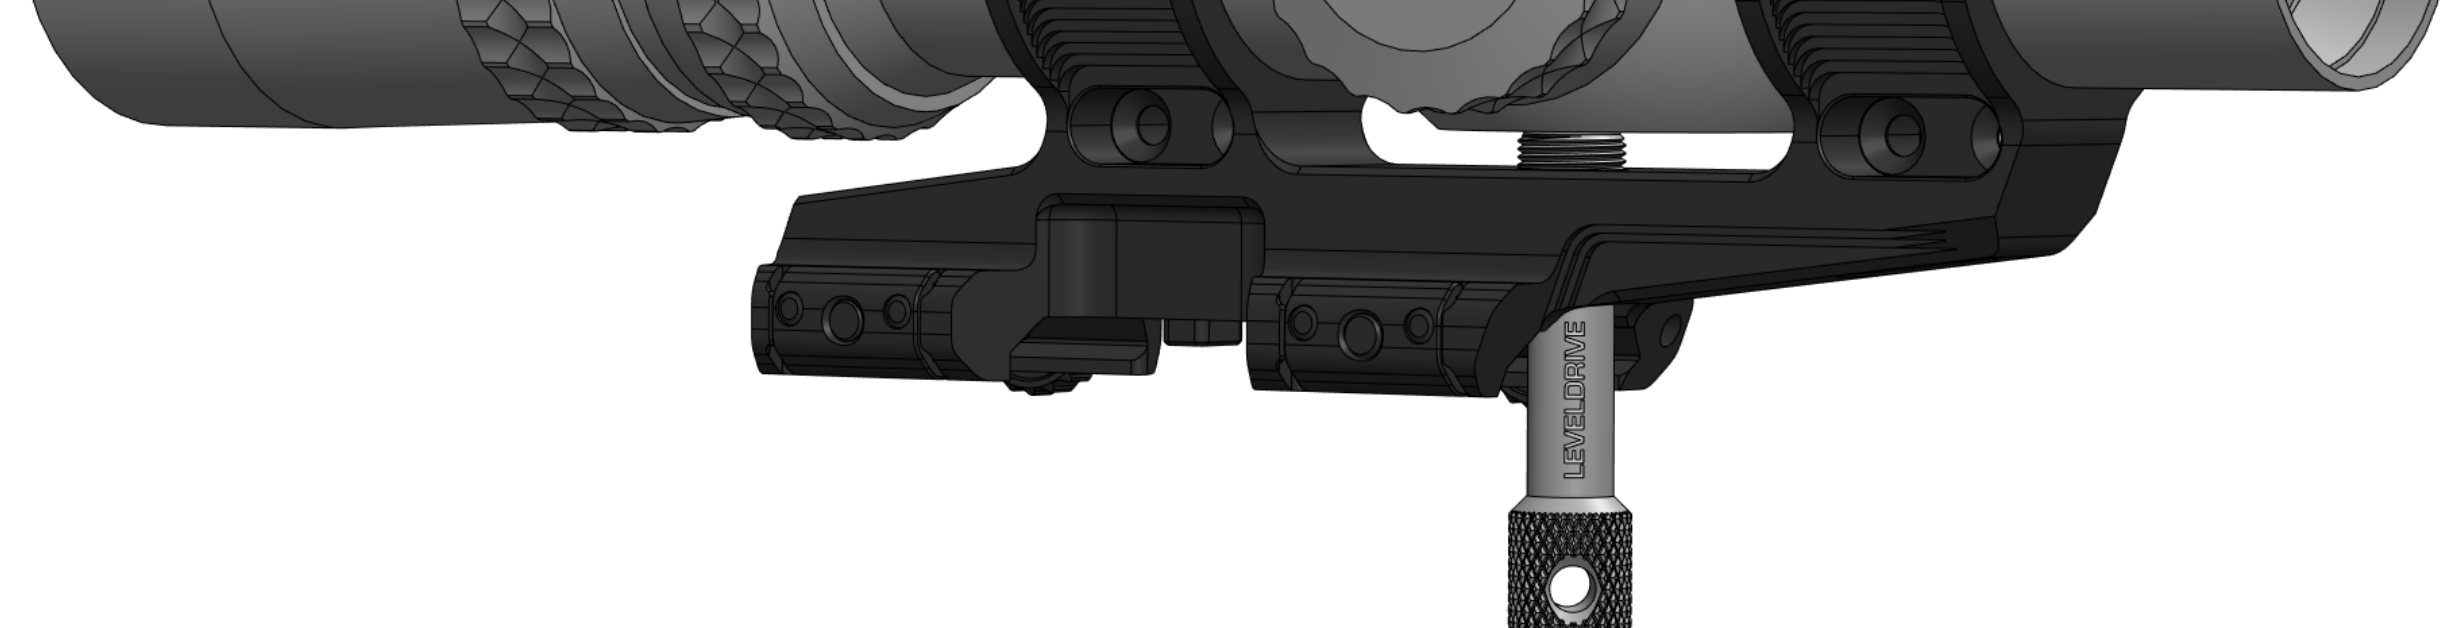

- 05.** Tighten each screw in the pattern shown, as many times as needed until torque stabilizes at 20inch-lbs.

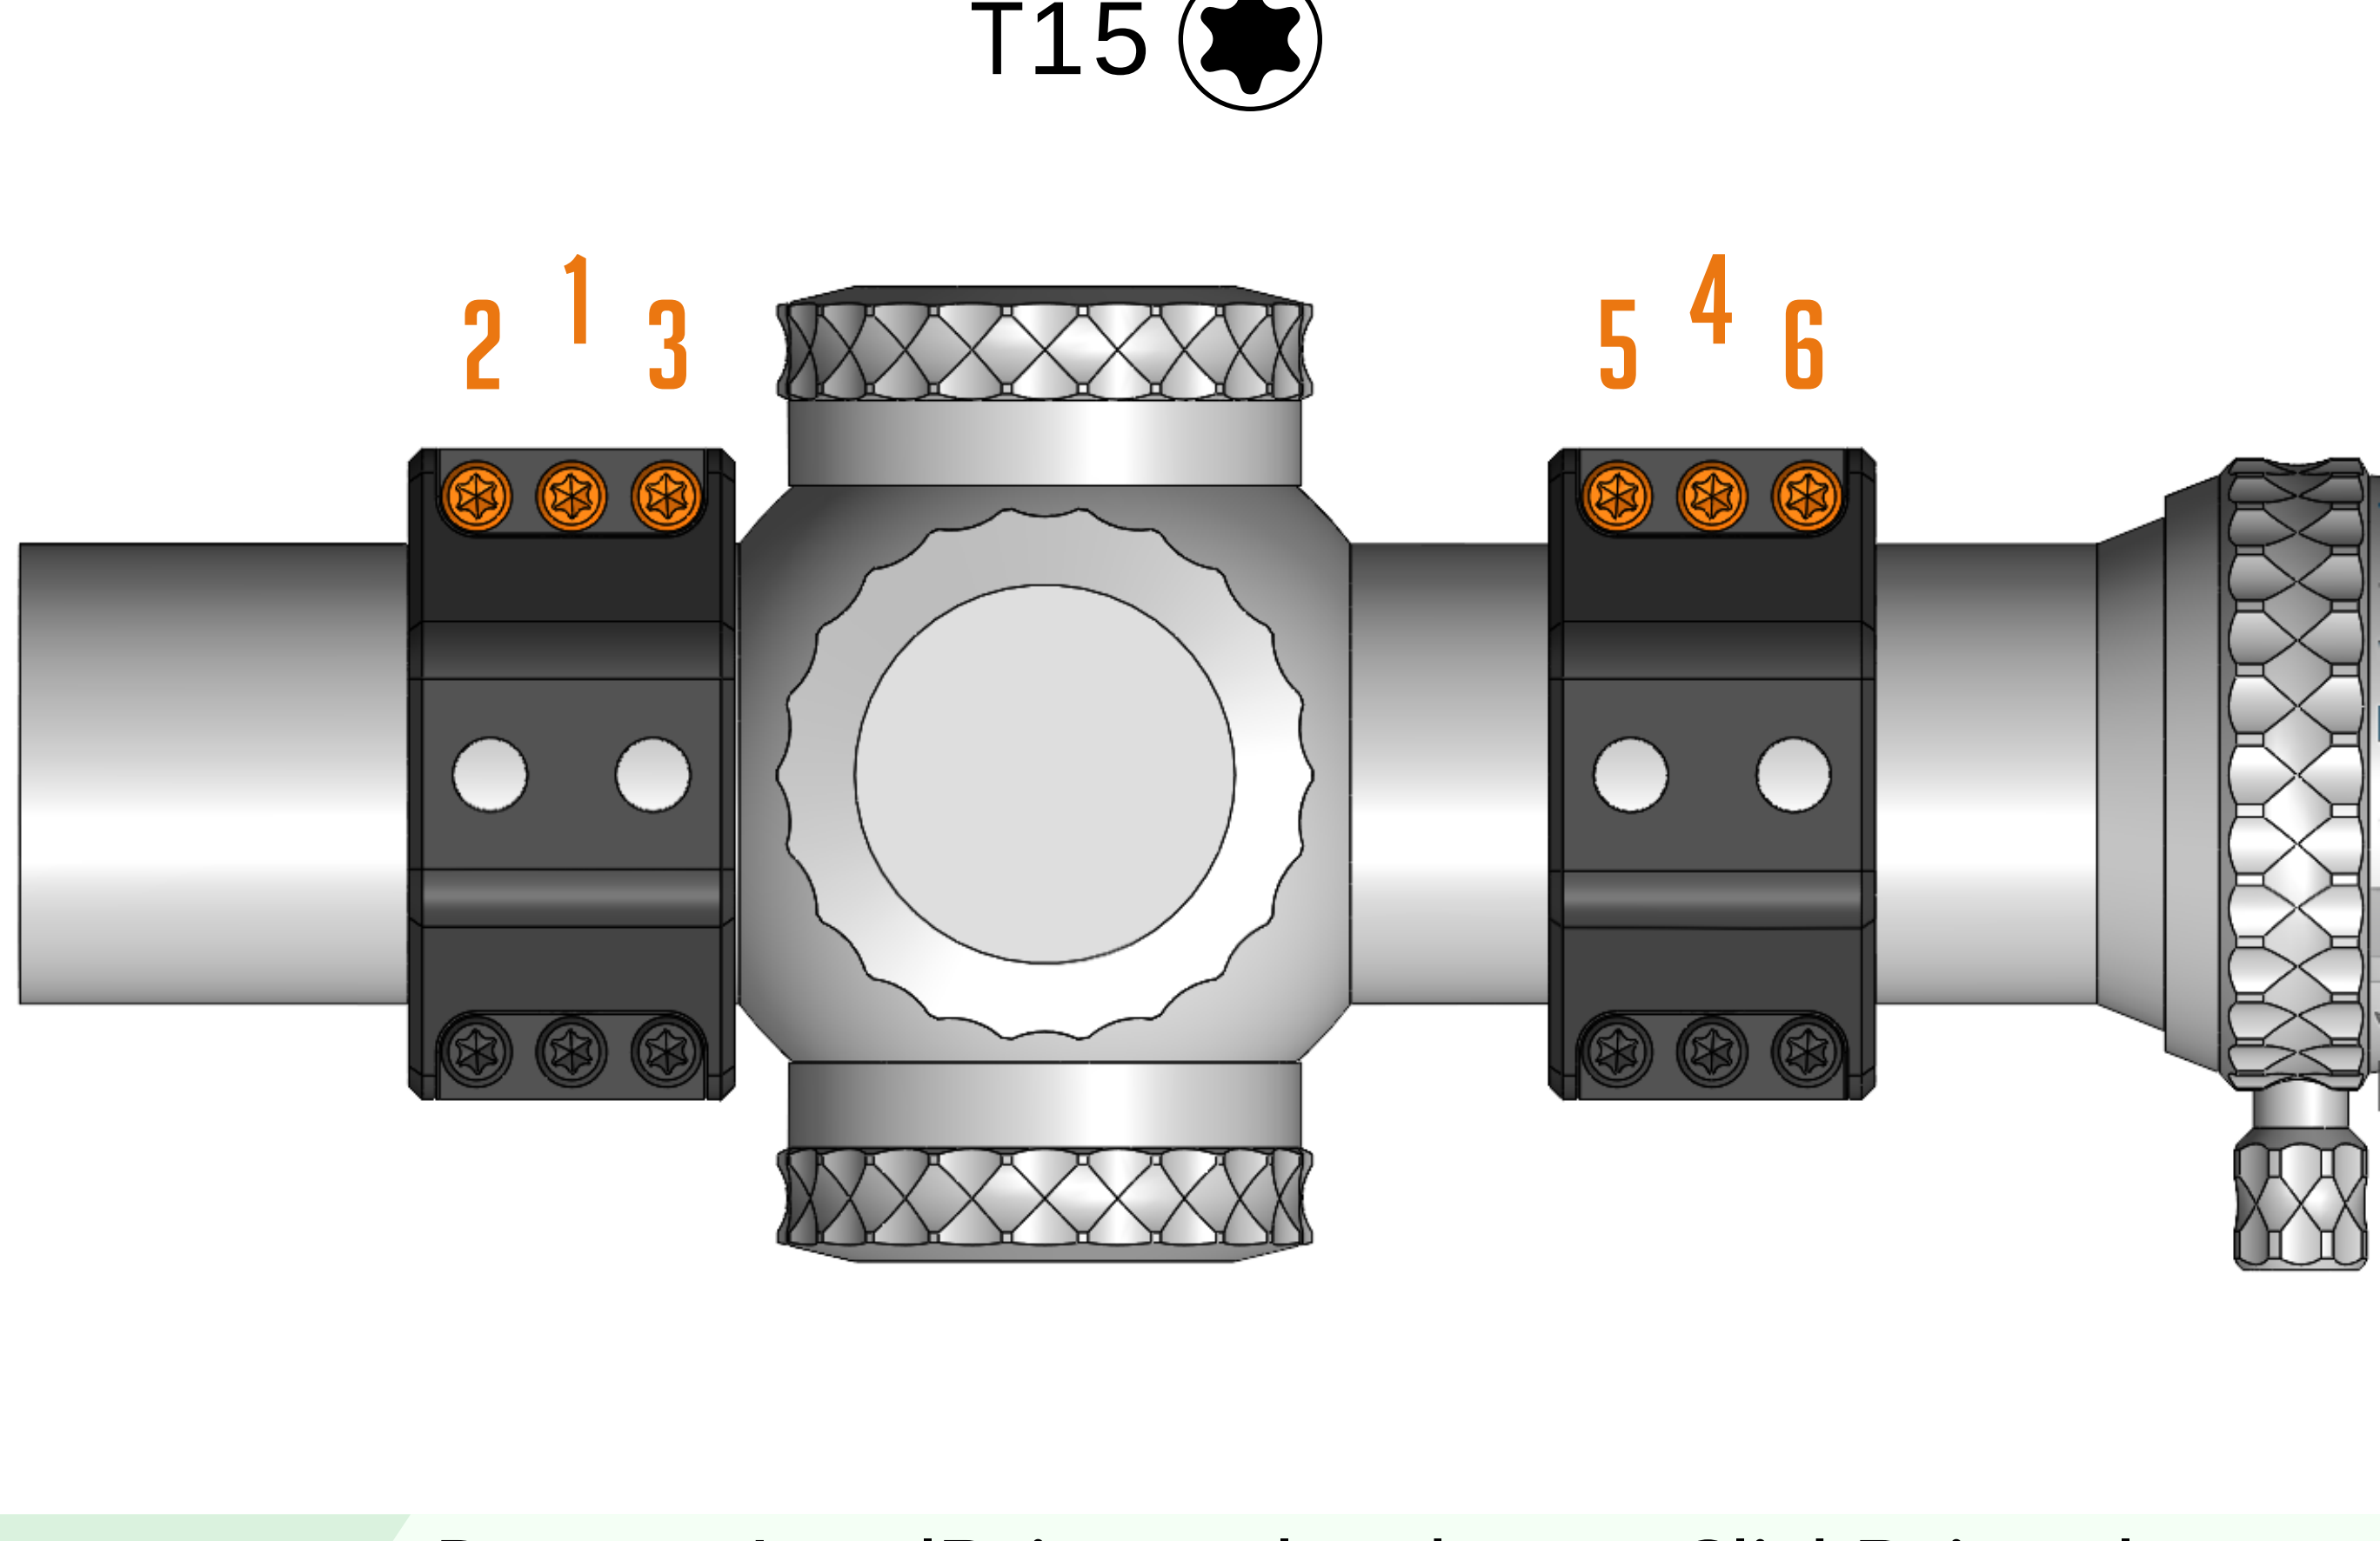


- 06.** Remove LevelDrive tool and open ClickDrive clamps no further than internal stops allow.

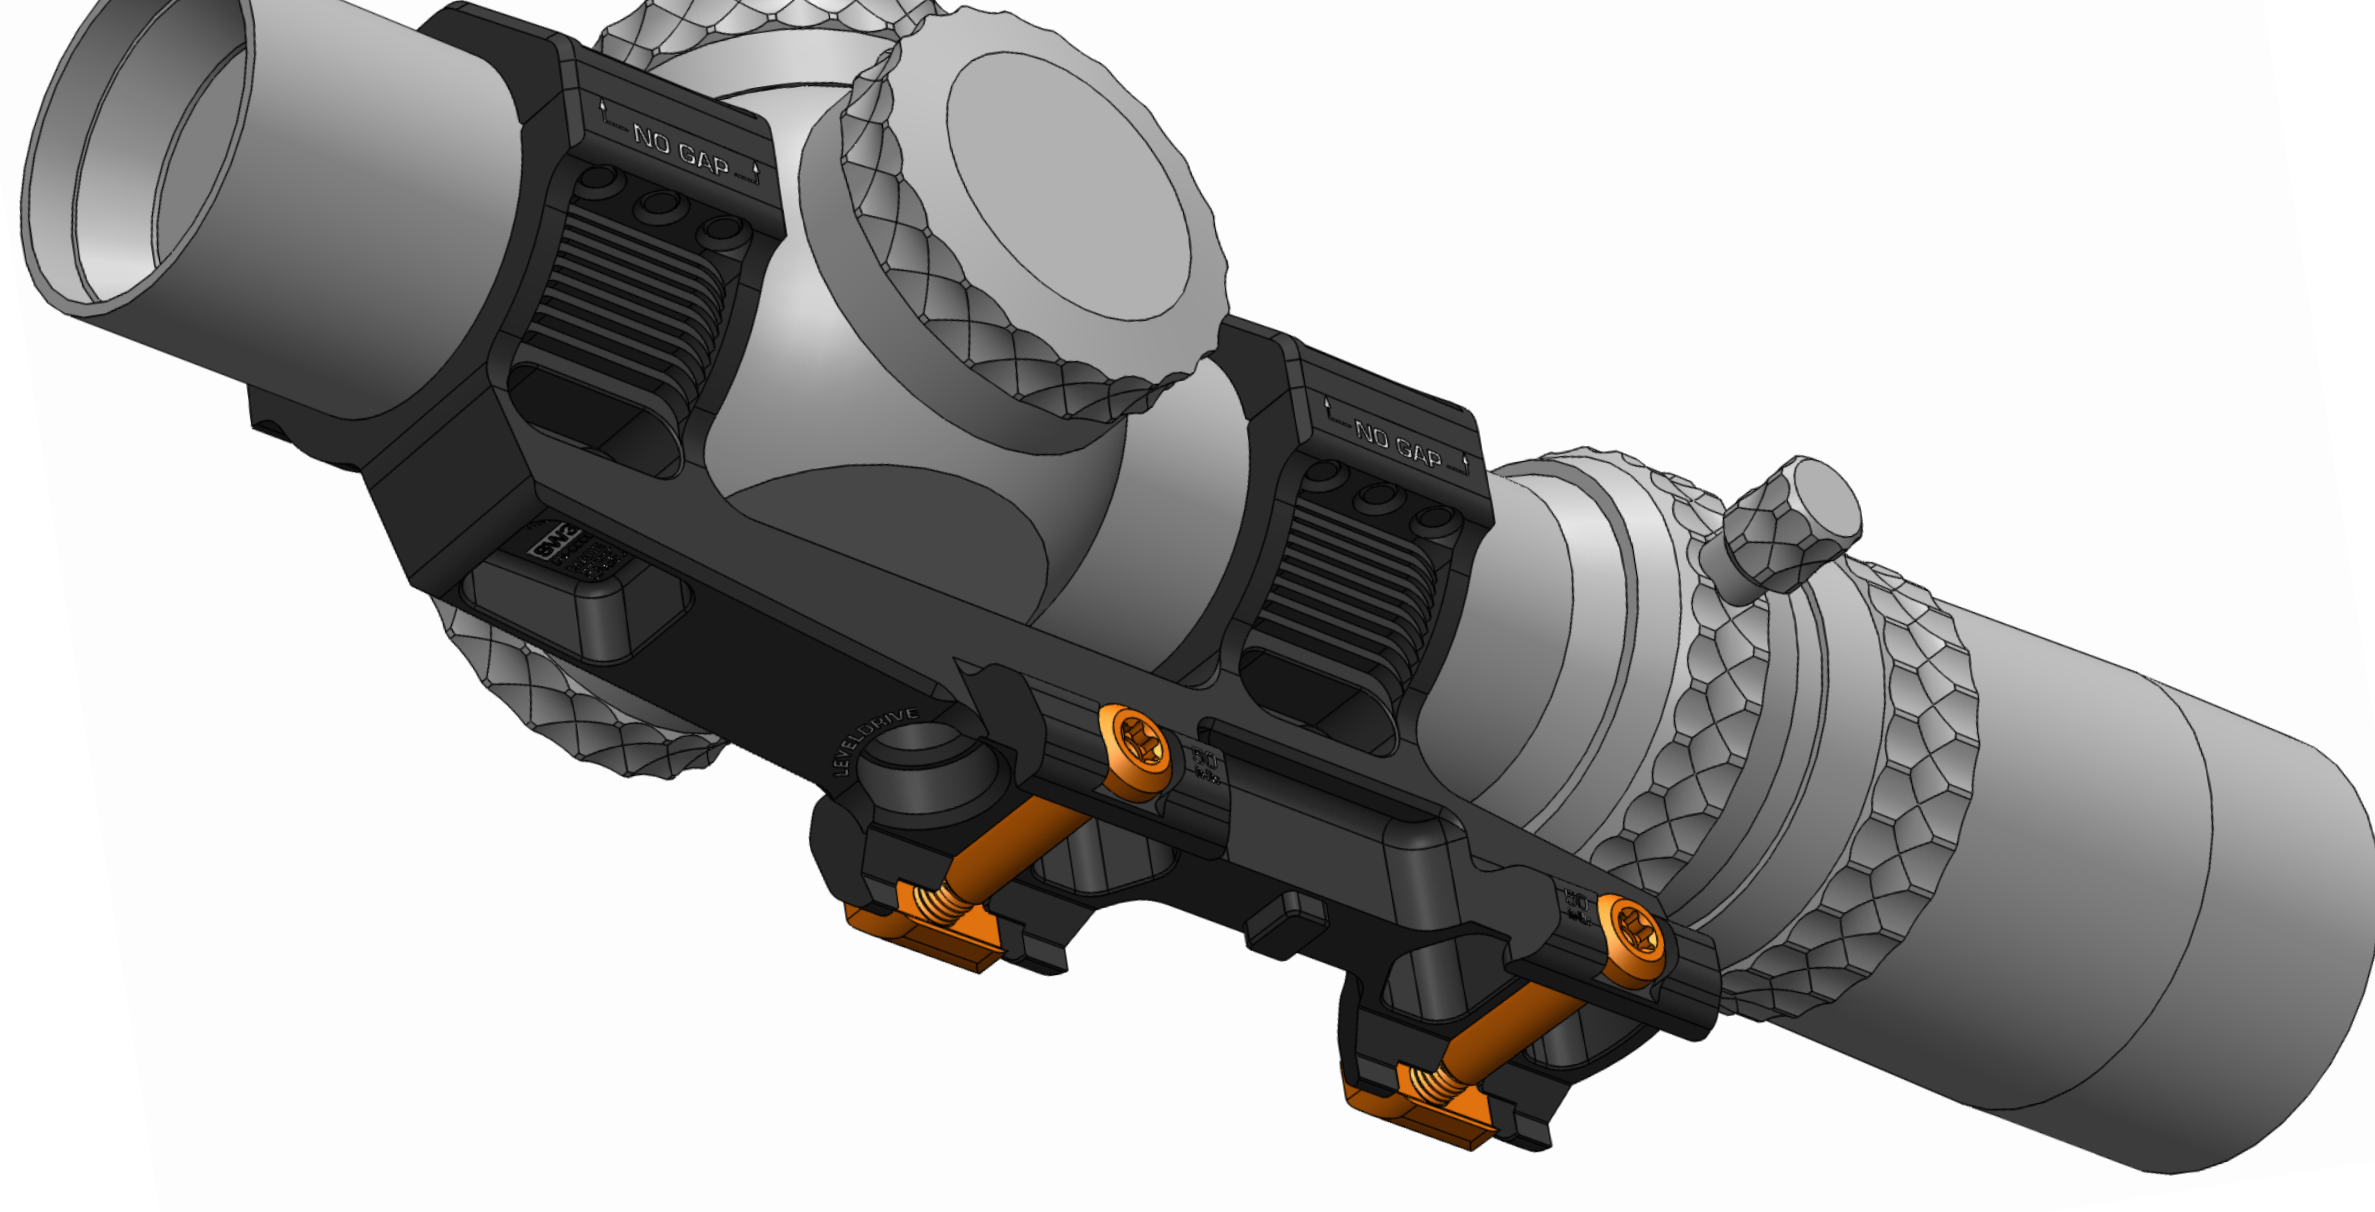


UNLOAD & MAKE WEAPON SAFE

- 07.** Hook Leap mount onto rail from ClickDrive Side and rock onto rail.

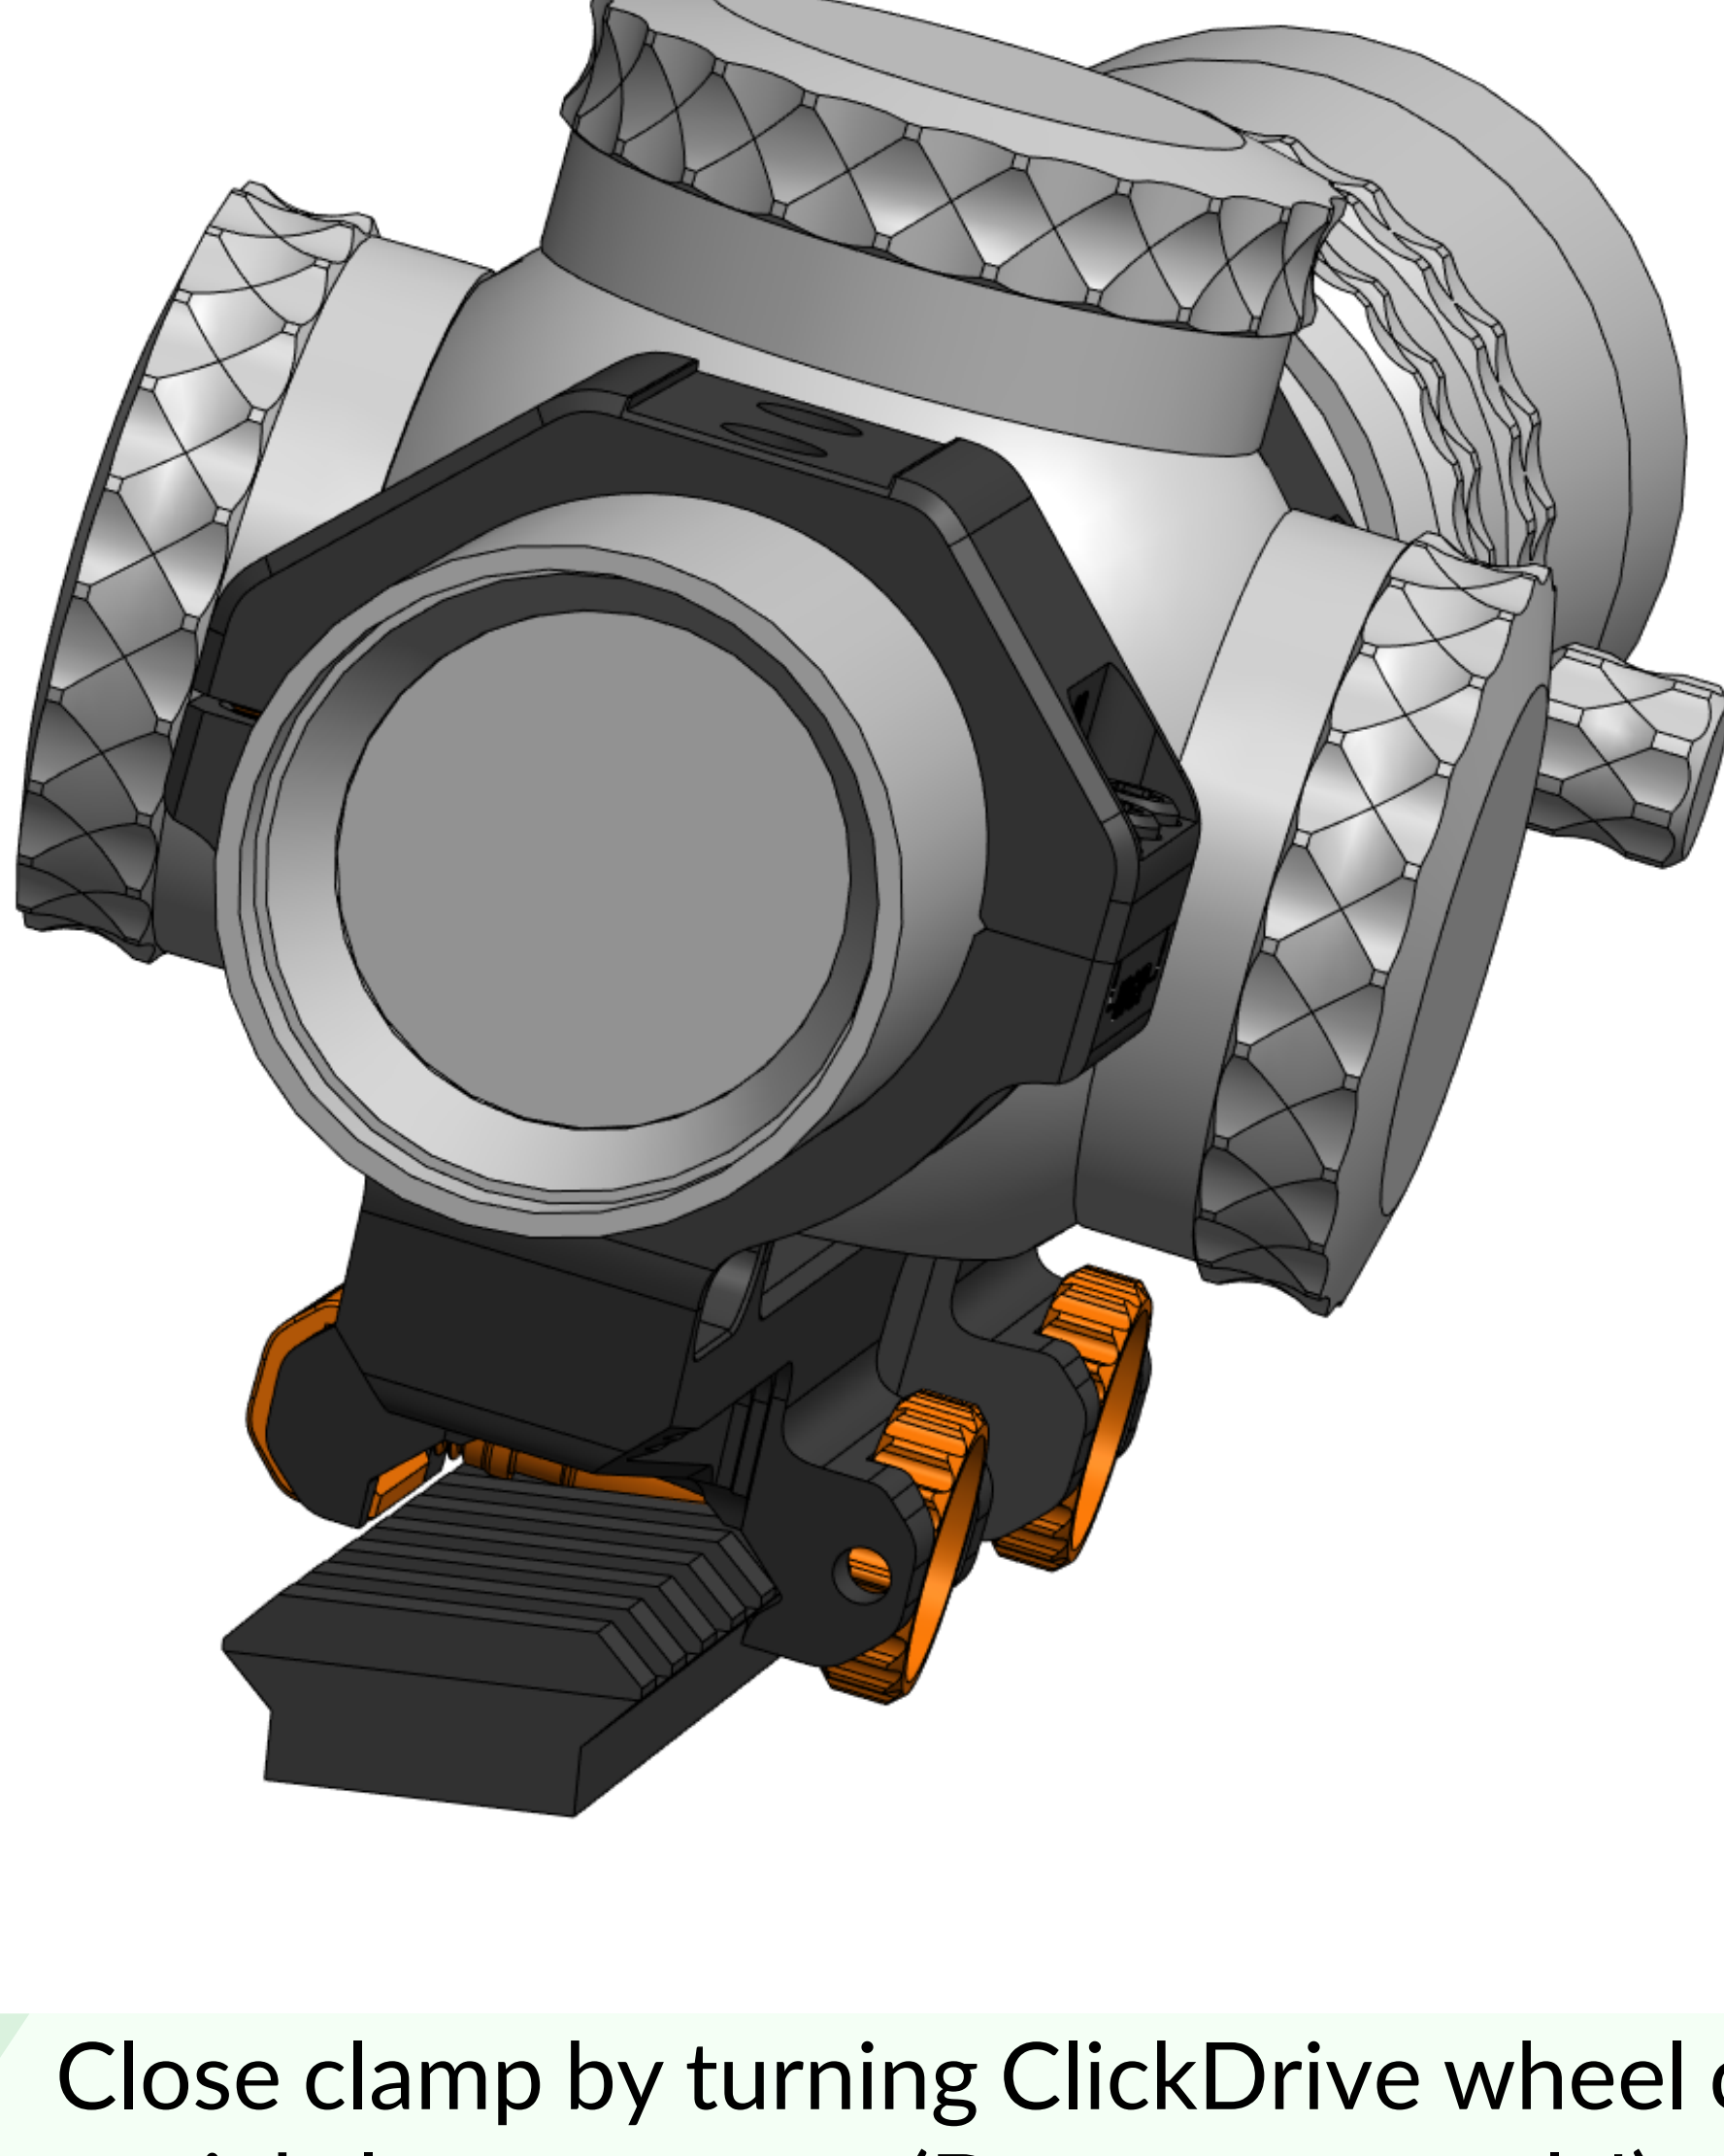

- 08.** Close clamp by turning ClickDrive wheel clockwise as tightly as you can (Do not use tools!).

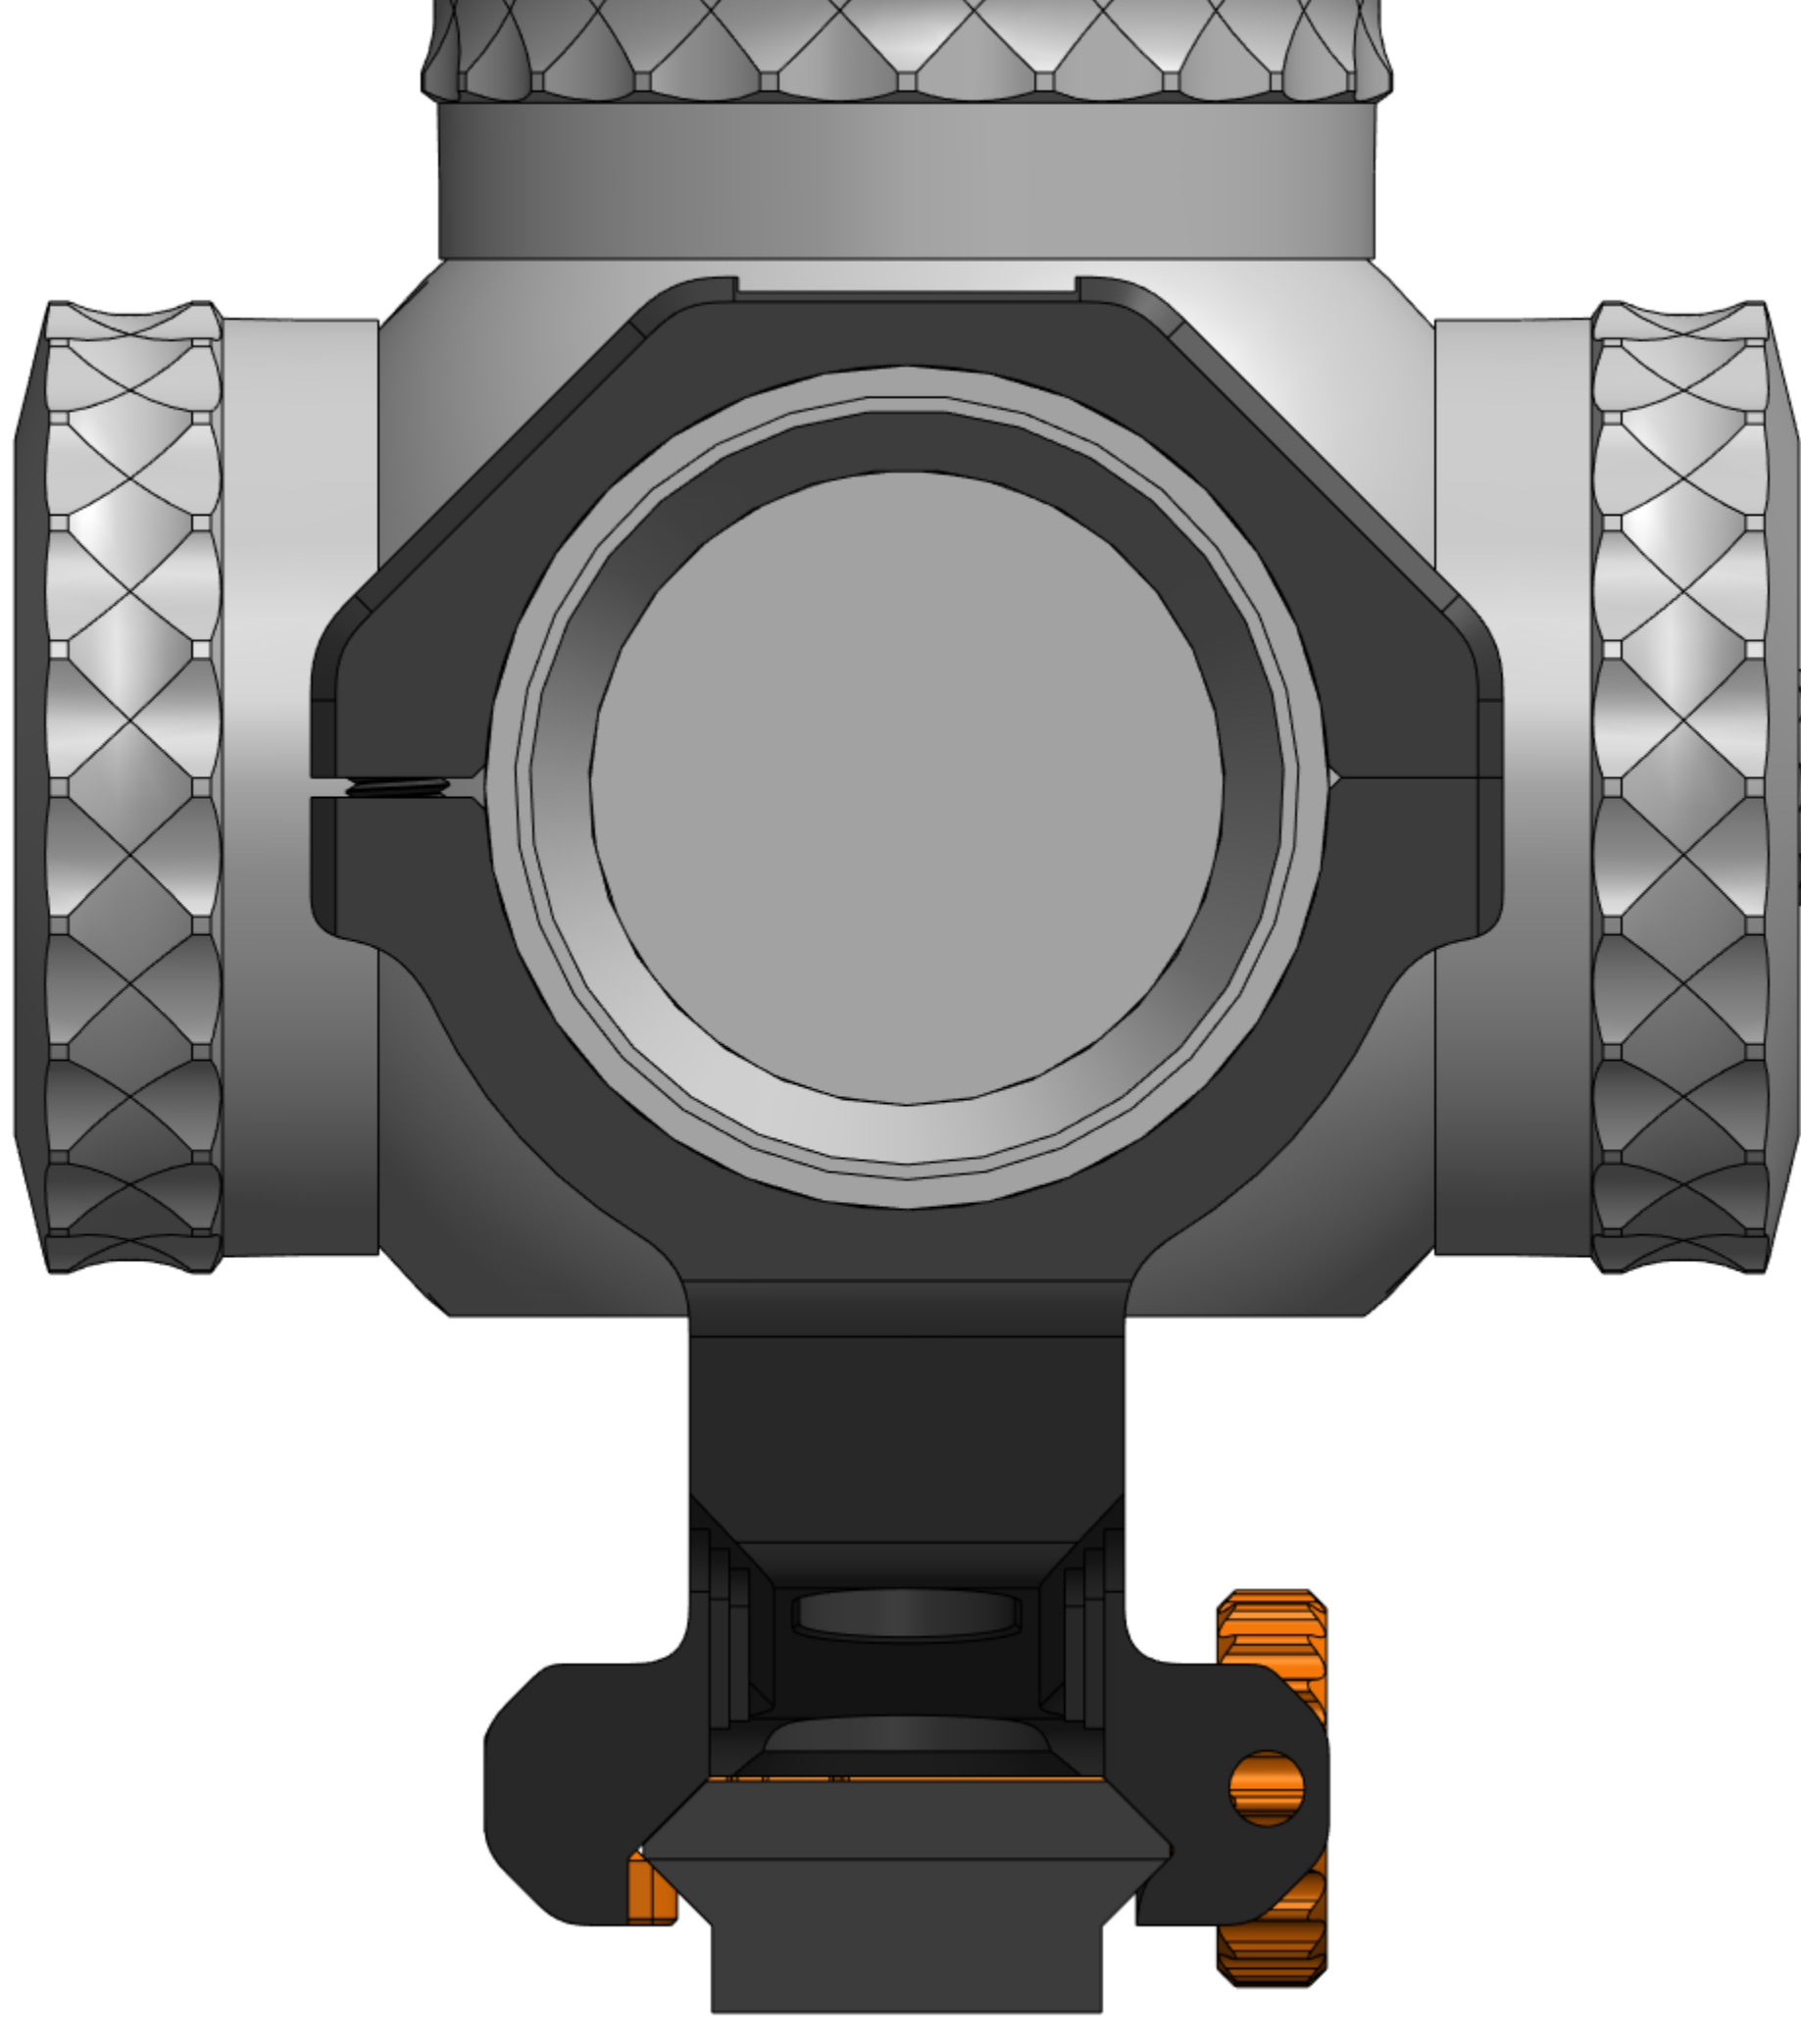

PRO TIP

USE YOUR RIGHT HAND TO TIGHTEN AND LEFT HAND TO LOOSEN

Questions?

[Email Support](#)