# SCALARWORKS®

S H O O T E R D R I V E N<sup>®</sup>

## PEAK/02 owner's manual







Questions?

EMAIL SUPPORT

## INSTALLATION



#### Flip open PEAK sights to facilitate installation.





02.


01.

Loosen cross-bolts sufficiently for clamps to clear



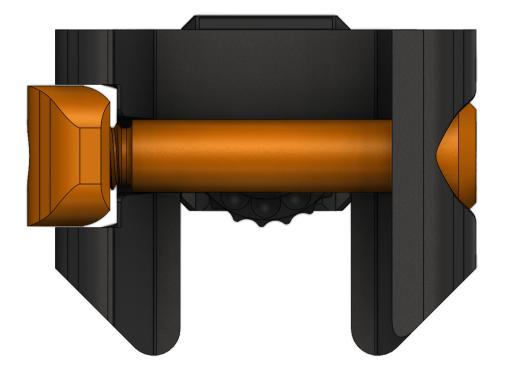

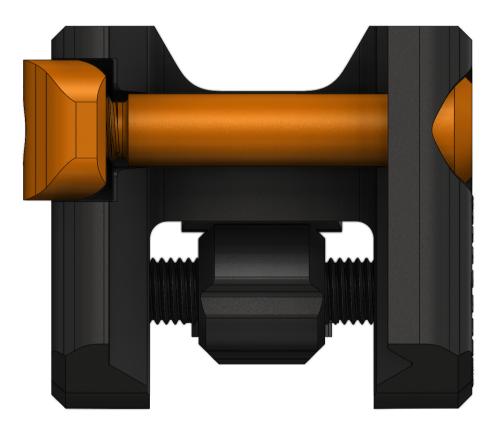

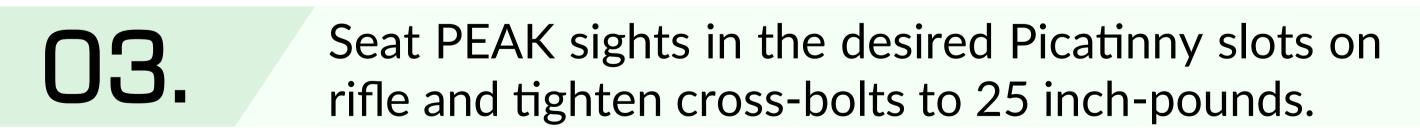








## ADJUSTMENT

01.

Measure distance (in inches) between front sight post and rear peep aperture.

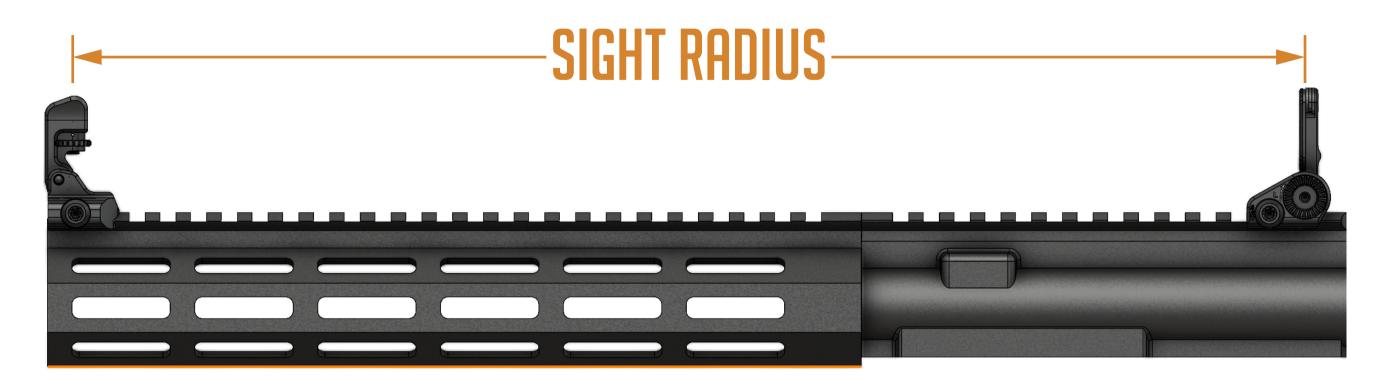

## MOA PER CLICK = 7.5 ÷ SIGHT RADIUS

02.

Press your thumb against windage dial and turn in direction of arrow to move point of impact LEFT.



**O3.** Turn elevation dial in direction of arrow to move point of impact UP.

