1. Insert screws by hand to avoid cross-threading.
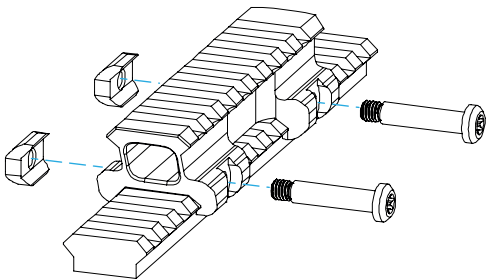
2. Progressively tighten screws, while firmly pressing T25 driver into the socket to avoid slippage.

3. Attach your optic bundle as per the instructions included with your Leap mount.