


⚠ UNLOAD & MAKE WEAPON SAFE ⚠

1. Insert screws by hand to avoid cross-threading.
2. Progressively tighten screws, while firmly pressing T10 driver into the socket to avoid slippage.

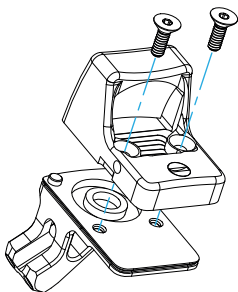

**MAX TORQUE 15 INCH-LBS**

1. Attach your scope as per the instructions included with your Leap mount.
2. Thread Kick mount screws through slot into Kick mount.
3. Progressively tighten screws, in an alternating pattern to **30 inch-lbs.**

